

DRIVER UTILITY DVD_BA-0881R_v1.2

All rights reserved. Copyright 2011

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

DRIVER CD CONTENT

DRIVER\---->\Flash BIOS\---->AFU.BAT (version:2.35 for Aptio(EFI) bios Update)
|
---->\Platform\Win7(32-bit)\F6floppy (for Intel AHCI & RAID F6 Floppy Installation Utility)
---->\Platform\Win7(64-bit)\F6floppy (for Intel AHCI & RAID F6 Floppy Installation Utility)
---->\Platform\XP(32-bit)\F6floppy (for Intel AHCI & RAID F6 Floppy Installation Utility)
|
---->\Platform\Win7(32-bit)\Intel RST\---->\iata_cd.exe (for IntelR Rapid Storage Technology Manager Utility)
---->\Platform\Win7(64-bit)\Intel RST\---->\iata_cd.exe (for IntelR Rapid Storage Technology Manager Utility)
---->\Platform\XP(32-bit)\Intel RST\---->\iata_cd.exe (for IntelR Rapid Storage Technology Manager Utility)
|
---->\Platform\Win7(32-bit)\LAN\---->\PROWinx32.exe (for Intel 82579LM & 82583V GIGA-LAN Driver)
---->\Platform\Win7(64-bit)\LAN---->\PROWinx64.exe (for Intel 82579LM & 82583V GIGA-LAN Driver)
---->\Platform\XP(32-bit)\LAN---->\PRO2K3XP_32.exe (for Intel 82579LM & 82583V GIGA-LAN Driver)
|

+---->\Platform\Win7(32-bit)\ME\---->\Setup.exe (For Intel Management Engine Interface)
+---->\Platform\Win7(64-bit)\ME\---->\Setup.exe (For Intel Management Engine Interface)
+---->\Platform\XP(32-bit)\ME\---->\Setup.exe (For Intel Management Engine Interface)
|
+---->\Platform\Win7(32-bit)\Sound\---->Setup.exe (for Realtek ALC888S Win7 Audio Driver)
+---->\Platform\Win7(64-bit)\Sound\---->Setup.exe (for Realtek ALC888S Win7 Audio Driver)
+---->\Platform\XP(32-bit)\Sound\---->Setup.exe (for Realtek ALC888S XP Audio Driver)
|
+---->\Platform\Win7(32-bit)\UTILITY\---->infinst_autol.exe (Intel Chipset Software Installation Utility)
+---->\Platform\Win7(64-bit)\UTILITY\---->infinst_autol.exe (Intel Chipset Software Installation Utility)
+---->\Platform\XP(32-bit)\UTILITY\---->infinst_autol.exe (Intel Chipset Software Installation Utility)
|
+---->\Platform\Win7(32-bit)\VGA\Ivy bridge\---->Setup.exe (for Intel HD Graphics Family)
+---->\Platform\Win7(32-bit)\VGA\Sandy bridge\---->Setup.exe (for Intel HD Graphics Family)
+---->\Platform\Win7(62-bit)\VGA\Ivy bridge\---->Setup.exe (for Intel HD Graphics Family)
+---->\Platform\Win7(64-bit)\VGA\Sandy bridge\---->Setup.exe (for Intel HD Graphics Family)
+---->\Platform\XP(32-bit)\VGA\Ivy bridge\---->Setup.exe (for Intel HD Graphics Family)
+---->\Platform\XP(32-bit)\VGA\Sandy bridge\---->Setup.exe (for Intel HD Graphics Family)

MANUAL\AdbRdr930_en_US.exe (PDF File reader)

=====

=====

This CD contains

1 System BIOS Update

Users of AMI UEFI BIOS can use the program "AFUDOS.exe" contained in CD-ROM for BIOS update.

a. This is found in CD:\Flash\AFUDOS.exe

2 The system has LAN function (Intel 82579LM/Intel 82583) that can support various network adapters. The content of the LAN driver is found as follows:

a. for Windows XP / Windows 7 32 / Windows 7 64

3 The Realtek ALC888S High Definition sound function enhanced in this system fully compatible with

You will find the contents of the directory in the SOUND.

a. for Windows XP / Windows 7 32 / Windows 7 64

4 Intel Chipset Software Installation Utility.(IntelR System Controller Hub C206 Chipset),

You will find the contents of the directory in the UTILITY.

a. for Windows XP / Windows 7 32 / Windows 7 64

5 The VGA interface (Intel(R) HD Graphics) is with our system to support CRT display, Display Port(Optional).

The following illustration briefly shows you the content of VGA driver in sub-directory \VGA\

a. for Windows XP / Windows 7 32 / Windows 7 64

6 IntelR Rapid Storage Technology for Raid / AHCI

You will find the contents of the directory in the Raid / AHCI.

a. for Windows XP / Windows 7 32 / Windows 7 64

7 Intel Management Engine Interface

You will find the contents of the directory in the AMT.

a. for Windows XP / Windows 7 32 / Windows 7 64

8 IntelR F6Floppy Files for F6 Install

You will find the contents of the directory in the RAID / AHCI

a. for Windows XP / Windows 7 32 / Windows 7 64

9 Adobe Acrobat Reader 9.3

a. for Windows XP / Windows 7 32 / Windows 7 64

Revision History

2013/07/31-Release Revision 1.10 - 1. Update Manual,"PMB-881LFM2" change to "PMB-881LFM3".

2. Remove Lan linux Driver

3. update Audio Driver to R267

2015/04/24-Release Revision 1.20 - 1. Add Ivy bridge VGA driver For Windows 7 32 / Windows 7 64 / Windows XP 32.

** Third party trademarks or brand names are the property of their owners.**