

DRIVER UTILITY BM-0897R_V1.1

All rights reserved. Copyright 2012

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

DRIVER CD CONTENT

DRIVER\---->\Flash BIOS\AFU.bat

|

|

+---->\Microsoft .NET Framework 3.5\NET Framework 3.5.exe

|

|

+---->\Platform\XP(32-bit)\Utility\Setup.exe (Intel Chipset Software

Installation Utility only for windows OS)

+---->\Platform\Win7,(32-bit)\Utility\Setup.exe (Intel Chipset Software

Installation Utility only for windows OS)

+---->\Platform\Win7,(64-bit)\Utility\Setup.exe (Intel Chipset Software

Installation Utility only for windows OS)

+---->\Platform\Win8(32-bit)\Utility\Setup.exe (Intel Chipset Software

Installation Utility only for windows OS)

+---->\Platform\Win8(64-bit)\Utility\Setup.exe (Intel Chipset Software

Installation Utility only for windows OS)

|

|

+---->\Platform\XP(32-bit)\VGA\Setup.exe (Intel HD Graphics Series

Driver only for windows OS)

+---->\Platform\Win7,(32-bit)\VGA\Setup.exe (Intel HD Graphics Series

Driver only for windows OS)

+---->\Platform\Win7,(64-bit)\VGA\Setup.exe (Intel HD Graphics Series

Driver only for windows OS)

+---->\Platform\Win8(32-bit)\VGA\Setup.exe (Intel HD Graphics Series

Driver only for windows OS)

+---->\Platform\Win8(64-bit)\VGA\Setup.exe (Intel HD Graphics Series

Driver only for windows OS)

|
|

+---->\Platform\XP(32-bit)\LAN\PROWin32.exe (Intel 82579LM &

82583V GIGA-LAN Driver only for windows OS)

+---->\Platform\Win7,(32-bit)\LAN\PROWin32.exe (Intel 82579LM &

82583V GIGA-LAN Driver only for windows OS)

+---->\Platform\Win7,(64-bit)\LAN\PROWinx64.exe (Intel 82579LM &

82583V GIGA-LAN Driver only for windows OS)

+---->\Platform\Win8(32-bit)\LAN\PROWin32.exe (Intel GIGA-LAN Driver

only for windows OS)

+---->\Platform\Win8(64-bit)\LAN\PROWinx64.exe (Intel GIGA-LAN

Driver only for windows OS)

|
|

+---->\Platform\XP(32-bit)\SOUND\Setup.exe (Realtek ALC888S Audio

Driver only for windows OS)

+---->\Platform\Win7,(32-bit)\SOUND\Setup.exe ((Realtek ALC888S

Audio Driver only for windows OS)

+---->\Platform\Win7,(64-bit)\SOUND\Setup.exe (Realtek ALC888S

Audio Driver only for windows OS)

+---->\Platform\Win8(32-bit)\SOUND\Setup.exe (Realtek ALC888S HD

Audio Driver only for windows OS)

+---->\Platform\Win8(64-bit)\SOUND\Setup.exe (Realtek ALC888S HD

Audio Driver only for windows OS)

|
|

+---->\Platform\XP(32-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win7,(32-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win7,(64-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win8(32-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win8(64-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

|
|

+---->\Platform\Win7,(32-bit)\USB3.0\Setup.exe (IntelR USB 3.0

eXtensible Host Controller Driver only for windows OS)

+---->\Platform\Win7,(64-bit)\USB3.0\Setup.exe (IntelR USB 3.0

eXtensible Host Controller Driver only for windows OS)

|
|

+---->\Platform\XP(32-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

+---->\Platform\Win7,(32-bit)\MIntel RST\Setup.exe (IntelR Rapid

Storage Technology Utility only for windows OS)

+---->\Platform\Win7,(64-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

+---->\Platform\Win8(32-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

+---->\Platform\Win8(64-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

|
|

+---->\Platform\XP(32-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win7,(32-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win7,(64-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win8(32-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win8(64-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

|
|

MANUAL\---->\AdbeRdr930_en_US.exe (PDF File reader)

=====
=====

This CD contains

1 System BIOS Update

Users of AMI UEFI BIOS can use the program "AFUDOS.exe" contained in CD-ROM for BIOS update.(AFUDOS Flash tool Version:v3.03)

a. This is found in CD:\DRIVER\FIash BIOS\AFU.bat

2 The system has LAN function (Intel 82579LM/Intel 82583V) that can support various network adapters. The content of the LAN driver is found as follows:

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8.1 32-bit / Windows 8.1 64-bit

3 The Realtek ALC888S High Definition sound function enhanced in this system fully compatible with

You will find the contents of the directory in the SOUND.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8.1 32-bit / Windows 8.1 64-bit

4 Intel Chipset Software Installation Utility.(IntelR System Controller Hub C216 Chipset),

You will find the contents of the directory in the UTILITY.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8.1 32-bit / Windows 8.1 64-bit

5 The VGA interface (Intel(R) HD Graphics) is with our system to support CRT display, Display Port(Optional).

The following illustration briefly show you the content of VGA driver in sub-directory \VGA\

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows

8.1 32-bit / Windows 8.1 64-bit

6 IntelR Rapid Storage Technology for Raid / AHCI.

You will find the contents of the directory in the Raid / AHCI.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows

8.1 32-bit / Windows 8.1 64-bit

7 Intel Management Engine Interface

You will find the contents of the directory in the AMT.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows

8.1 32-bit / Windows 8.1 64-bit

8 IntelR F6Floppy Files for F6 Install

You will find the contents of the directory in the RAID / AHCI

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows

8.1 32-bit / Windows 8.1 64-bit

9 IntelR USB 3.0 eXtensible Host Controller

You will find the contents of the directory in the USB3.0

a. for Windows 7 32-bit / Windows 7 64-bit

b. There is Intel USB3.0 not support Windows XP 32-bit

10 Adobe Acrobat Reader 9.3

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows

8.1 32-bit / Windows 8.1 64-bit

Revision History

2012/04/16 Release BM-0897R Driver 1.0

2017/10/12 Release BM-0897R Driver 1.0 change to BM-0897R Driver 1.1

1. Base on SA-5897_V1.2 Driver DVD

change to BM-0897R_V1.1 Driver DVD

**** Third party trademarks or brand names are the property of their owners.****