

DRIVER UTILITY POS-3320

Driver CD Revision History

20130108-->PA-3320\_User Manual\_M1.pdf

=====  
=====

All rights reserved. Copyright 2013

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is UTILITY --> VGA --> LAN --> SOUND --> TOUCH

=====  
=====

DRIVER CD CONTENT

=====  
=====

DRIVER\---->\FLASH BIOS\AFU.bat  
|  
|  
+---->\Plaform\XP,POSReady2009 (32-bit)\Main Chip\infinst\_autol.exe  
(Intel Chipset Software Installation Utility only for windows OS)  
+---->\Plaform\Win7,POSReady7(32-bit)\Main Chip\infinst\_autol.exe  
(Intel Chipset Software Installation Utility only for windows OS)  
|  
|  
+---->\Plaform\VGA\XP,POSReady2009 (32-bit)(WINXP ,POS Ready 2009  
DRIVER)

```
+---->\Plaform\VGA\Win7,POSReady7(32-bit) (WIN7 32bit DRIVER)
|
|
+---->\Plaform\XP,POSReady2009 (32-bit)\LAN\Realtek
RTL8111DL\WinXP_32bit\PCIE_Install_5736_0820\setup.exe (WINXP ,POS Ready
2009 DRIVER)
+---->\Plaform\Win7,POSReady7(32-bit)\LAN\Realtek
RTL8111DL\Win7_32_64bit\lInstall_Win7_7041_03212011\Setup.exe (WIN7 32bit
and 64bit DRIVER)
|
|
+---->\Plaform\XP,POSReady2009 (32-bit)\SOUND\Realtek
ALC888\Win_XP_32bit\WDM_R236.exe (WINXP ,POS Ready 2009 DRIVER)
+---->\Plaform\Win7,POSReady7(32-bit)\SOUND\Realtek
ALC888\Win7_32_64bit\Vista_Win7_R266.exe (WINVISTA/7 32bit and 64bit
DRIVER)
|
|
+---->\Device\Touch Screen\Win2K_XP_VISTA_7\Setup.exe (WINXP ,POS
Ready 2009, WIN_7_32_64bit DRIVER)
|
|
+---->\Device\Embedded fingerprint\DigitalPersonal\SETUP.EXE (Option)
|
|
+---->\Device\Embedded MSR\{(ID Tech MSR and Sysking MSR , demo
AP , OPOS Driver) (Option)
|
|
+---->\Device\Embedded Printer\{(Labau and SII Printer Driver) (Option)
|
|
+---->\Device\Embedded RFID Module\GIGA-TMS\AUTORUN.EXE
(Option)
|
|
+---->\Device\VFD\Labau Setup.exe(demp AP ,OPOS Driver) (Option)
```

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====  
=====

### 1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:\Flash\AFU.bat

#### BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFU.BAT and "BIOS ROM file

(ex.6620XXXX.ROM)" (\*the flash drive need 2MB free space. )

- b. Use flash drive to boot, then type "AFU 6620XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afu 66201P03.ROM <enter>)

2. The system has LAN function (Realtek RTL8111DL) that can support various network adapters. The content of the LAN driver is found as follows:

- a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

3. The Realtek ALC888 HD Audio codec sound function enhanced in this system fully compatible with

Windows XP, Windows Vista you will find the content of the Sound driver.

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

4. The UTILITY directory is contained in CD-ROM for INTEL D525 Driver

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

5. The VGA interface (Intel(R) Graphics Media Accelerator 3150 ) is embedded with our system to support

CRT display, Panel Link (optional) and TV-Out Encoder (optional). The following illustration briefly shows

you the content of VGA driver in sub-directory \VGA\

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

\*\*\*\* Third party trademarks or brand names are the property of their owners.\*\*\*\*