

DRIVER UTILITY SE-8124 Driver 1.2

All rights reserved. Copyright 2019

Driver DVD Revision History

20190314 Add 4G LTE U-Blox Driver

20220527 Update User manual

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3.The sequence of setup is Main Chip --> TXE --> KMDF(For win7)--> MBI(For win8.1) --> VGA -->LAN --> SOUND--> USB3.0(For win7)-->Card Reader

=====  
=====

DRIVER DVD CONTENT

=====  
=====

```
DRIVER\---->\Driver\Flash BIOS\E3826E\3845\I.bat
      +---->\Driver\Flash BIOS\J1900\D.bat
      |
      |
      +---->\Platform\E3826\E3845\Win7,Win8.1(32/64-bit)\Main
Chip\Chipset_10.0.22_Public\Setup Chipset(Intel Chipset Software Installation Utility
only for windows OS)
      +---->\Platform\J1900\Win7,Win8.1(32/64-bit)\Main
Chip\Chipset_10.0.22_Public\Setup Chipset
      |
      |

+---->\Platform\E3826\E3845\Win7,Win8.1(32/64-bit)\TXE\D:\IPC\SE-8124
V1.0\Driver\Platform\E3826E3845\Win7,Win8.1(32,64-bit)\TXE\1.1.4.1148_I_Conver
ged_G01_20150422\TXE_KIT_RELEASE\ISG\Installers\TXEI_Windows_DRIVER\TXEI\S
```

etup TXE

+---->\Platform\J1900\Win7,Win8.1(32/64-bit)\TXE\Installers\TXEI\_Windows\_DRIVER  
\Setup TXE

|  
|

+---->\Platform\E3826\E3845\Win7(32/64-bit)\KMDf For  
Win7\kmdf-1.11-Win-6.1-x86.msu

+---->\Platform\J1900\Win7(32/64-bit)\KMDf For  
Win7\kmdf-1.11-Win-6.1-x86.msu

|  
|

+---->\Platform\E3826\E3845\Win8.1(32/64-bit)\MBI For  
Win8\MBI\_Win8\_Win8.1\_1.70.305.16316\Setup

+---->\Platform\J1900\Win7,Win8.1(32/64-bit)\

|  
|

+---->\Platform\E3826\E3845\Win7,Win8.1(32,64-bit)\VGA\x86\Intel\_EMGD.WIN7\_P  
C\_Version\_36\_15\_0\_1097\Setup

+---->\Platform\J1900\Win7,Win8.1(32,64-bit)\VGA\x86\Intel\_EMGD.WIN7\_PC\_Versi  
on\_36\_15\_0\_1097\Setup

|  
|

+---->\Platform\E3826\E3845\Win7,Win8.1(32,64-bit)\LAN\I210\PROWin32 or  
PROWin64

+---->\Platform\J1900\Win7,Win8.1(32,64-bit)\LAN\I210\PROWin32 or  
PROWin64

|  
|

+---->\Platform\E3826\E3845\Win7,Win8.1(32,64-bit)\Sound\Win7\_Win8\_Win81\_R2  
75\Setup

+---->\Platform\J1900\Win7,Win8.1(32,64-bit)\Sound\Win7\_Win8\_Win81\_R275\Setu  
p

```
|
|
+---->\Driver\Device\USB3 for Win7\Setup
|
|
+---->\Driver\Device\Card Reader\Intel Processor Win7 IO Drivers 32Bit
or 64Bit
```

```
|
|
+---->\Driver\Device\Wifi\Setup
|
|
+---->\Driver\Device\4G LTE\U-Blox
MPCI-L210\EC25MiniPCle\Driver\Windows\Quectel_LTE_Windows_USB_Driver_V1.
0\Quectel_LTE_Windows_USB_Driver_V1.0\Setup
```

```
|
|
+---->\Driver\Device\4G LTE\U-Blox
MPCI-L210\Ublox\ublox_TOBY-L2xx_windows_3264_v1.0.1.6
```

API Package\---+---->\DEMO PROJECT\

```
|
|
+---->\ProxAPI standard\
|
|
+---->\Document\
```

MANUAL\AdbeRdr930\_en\_US.exe (PDF File reader)

=====
=====

### 1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in DVD-ROM for BIOS update.

a. This is found in DVD:\Flash\8124.bat

#### BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFU.BAT and "BIOS ROM file

(ex.8124xxxx.bin)" (\*the flash drive need 8MB free space. )

b. Use flash drive to boot, then type "AFU 8124XXXX.bin" and press enter to automatically flash BIOS.

(ex. C:\>afu 81240PI2.ROM <enter>)For E3826 and E3845

(ex. C:\>afu 81240PD2.ROM <enter>)For J1900

2. The system has LAN function (Intel I210) that can support various network adapters. The content of the LAN driver is found as follows:

a. Win7,Win8.1(32/64-bit)

3. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with

Windows 7, Windows 8.1 you will find the content of the Sound driver.

a. Win7,Win8.1(32/64-bit)

4. The Main Chip directory is contained in DVD-ROM for INTEL Bay trial Driver

a. Win7,Win8.1(32/64-bit)

5. The VGA interface (Intel ® Atom ™ Processor E3800 Series Driver)

a. Win7,Win8.1(32/64-bit)

\*\*\*\* Third party trademarks or brand names are the property of their owners.\*\*\*\*

