

DRIVER UTILITY SP-792X Driver 1.1

All rights reserved. Copyright 2015

Driver DVD Revision History

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3. The sequence of setup is Main Chip --> VGA --> LAN --> Sound --> Touch --> WIFI(Optional)

=====  
=====

DRIVER DVD CONTENT

=====  
=====

Driver\---+--->\Flash BIOS\AFU.bat

|  
|

+--->\Platform\Win7(32-bit)\Main Chip\infinst\_autol.exe (Intel Chipset Software Installation Utility only for windows OS)

|  
|

+--->\Platform\Win7(32-bit)\VGA\Win7\_1091.exe

|  
|

+--->\Platform\Win7(32-bit)\LAN\PROWin32.exe

|  
|

+--->\Platform\Win7(32-bit)\Sound\Vista\_Win7\_Win8\_R271.exe

|  
|

+---->\Platform\Win7(32-bit)\Touch\setup.exe

|  
|

+---->\Platform\Win7(32-bit)\WIFI(Optional)\IS\_AP\_STA\_RT2870\_D-5.1.7.0\_VA-5.1.7.0\_W7-5.1.7.0\_W8-5.1.7.0\_RU-5.0.8.0\_AU-5.0.3.0\_092313\_1.5.31.0WP\_.exe

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====  
=====

## 1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in DVD-ROM for BIOS update.

a. This is found in DVD:\Driver\Flash BIOS\AFU.bat

### BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFU.BAT and "BIOS ROM file

(ex.792XXXXX.ROM)" (\*the flash drive need 4MB free space. )

b. Use flash drive to boot, then type "AFU 792XXXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afu 79290P03.ROM <enter>)

2. The system has LAN function (Intel 82583V) that can support various network adapters. The content of the LAN driver is found as follows:

a. Windows 7\_32bit

3. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with

Windows 7 you will find the content of the Sound driver.

a. Windows 7\_32bit

4. The Main Chip directory is contained in DVD-ROM for INTEL NM10 Driver

a. Windows 7\_32bit

5. The VGA interface (Intel(R) HD Graphic Driver ) is embedded with our system to support

CRT display and LVDS. The following illustration briefly shows you the content of VGA driver in sub-directory \VGA\

a. Windows 7\_32bit

\*\*\*\* Third party trademarks or brand names are the property of their owners.\*\*\*\*