

USER MANUAL

BE-U830

**EPIC CPU Board with Intel®
Elkhart Lake Atom™ / Pentium® /
Celeron® SoC CPU Processor**

BE-U830 M1

BE-U830
EPIC CPU Board with Intel[®] Elkhart Lake
Atom[™] / Pentium[®] / Celeron[®] SoC CPU

COPYRIGHT NOTICE & TRADEMARK

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

This manual is copyrighted in Sep. 2022. You may not reproduce or transmit in any form or by any means, electronic, or mechanical, including photocopying and recording.

DISCLAIMER

This user's manual is meant to assist users in installing and setting up the system. The information contained in this document is subject to change without any notice.




CE NOTICE

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any change or modifications to the equipment not expressly approve by the party responsible for compliance could void your authority to operate such equipment.

	CAUTION: Danger of explosion may occur when the battery is incorrectly replaced. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.
	CAUTION: Always touch the board components by the edges. Never touch components such as a processor by its pins. Take special cares while you are holding electronic circuit boards by the edges only. Do not touch BE-U830 components.
	WARNING: Some internal parts of BE-U830 may have high electrical voltage. We strongly recommend that only qualified engineers are allowed to service and disassemble the system. If any damages should occur on BE-U830 and are caused by unauthorized servicing, it will not be covered by the product warranty.

Contents

1	Introduction	1-1
1.1	About This Manual	1-2
2	Getting Started	2-1
2.1	Package List.....	2-2
2.2	BE-U830 Specifications.....	2-3
2.3	Safety Precautions	2-6
3	Hardware Configuration	3-1
3.1	Jumper & Connector Quick Reference Table.....	3-2
3.2	Component Locations	3-3
3.2.1	BE-U830 Top View	3-3
3.2.2	BE-U830 Jumper Setting.....	3-4
3.2.3	BE-U830 Bottom View.....	3-11
3.2.4	BE-U830 I/O View	3-12
3.3	HOW TO SET JUMPERS	3-13
3.4	I/O Ports	3-15
3.4.1	DC In 2 Pins Terminal Block (PWR_IN1)	3-15
3.4.2	Dual LAN Ports (LAN1, LAN2)	3-16
3.4.3	3 x 1 USB 2.0 Ports (USB2)	3-17
3.4.4	Dual USB 3.0 Ports (USB1)	3-18
3.4.5	Display Port (DP) Port Connector (JDP_HDMI1).....	3-19
3.4.6	HDMI Connector (JDP_HDMI1)	3-20
3.5	SETTING CONNECTORS AND JUMPERS	3-21
3.5.1	COM1 and COM2 Connector (JCOM1, JCOM2)	3-21
3.5.2	2 x Internal USB 2.0 Pin Headers (JUSB1).....	3-22

3.5.3	Internal USB 2.0 Wafers (JUSB2).....	3-22
3.5.4	Digital Input / Output Connectors (JDIO1, JDIO2)	3-23
3.5.5	HD Audio Connector (JAUDIO1).....	3-24
3.5.6	Power Input Connector (PWR2).....	3-25
3.5.7	Mini PCI Express Slot (M_PCIE1).....	3-26
3.5.8	Micro SIM Card Socket (SIM1).....	3-27
3.5.9	LVDS Inverter Connector (JINV1)	3-28
3.5.10	LVDS Connector (LVDS1)	3-29
3.5.11	M.2 Wi-Fi Express Slot (M2_E1) (option).....	3-30
3.5.12	M.2 SSD Express Slot (M2_M1)	3-32
3.5.13	SATA 3.0 & HDD Power Connectors (SATA1, JHD_PWR1)	3-34
3.5.14	RTC Connector (JBAT1).....	3-35
3.5.15	Power LED Connector (JLED1)	3-35
3.5.16	Power Button Connector (JBTN1).....	3-35
3.5.17	COM1 Port Voltage Selection (JP_COM1).....	3-36
3.5.18	USB1 Port Power Selection (JP_USB1)	3-37
3.5.19	LVDS Voltage Selection (JP_VDD1)	3-38
3.5.20	Low Pin Count Selection (JP_LPC1).....	3-39
3.5.21	LVDS Sequence Selection (JP1).....	3-40
3.5.22	LVDS Backlight Control Selection (JP7).....	3-41
3.5.23	Clear CMOS Data Selection (JCOMS1).....	3-42
4	Software Utilities	4-1
4.1	Introduction.....	4-2
4.2	Installing Intel® Chipset Software Installation Utility	4-3
4.3	Installing Graphics Driver Utility	4-4
4.4	Installing LAN Driver Utility.....	4-5
4.5	Installing Sound Driver Utility	4-6

4.6	Installing Intel® Management Engine Components Driver Installer	4-7
5	BIOS SETUP	5-1
5.1	Introduction.....	5-2
5.2	Accessing Setup Utility.....	5-3
5.3	Main.....	5-6
5.4	Advanced	5-8
5.4.1	Advanced – CPU Configuration	5-9
5.4.2	Advanced – PCH-FW Configuration.....	5-10
5.4.3	Advanced – ACPI Settings	5-11
5.4.4	Advanced – F81967 Super IO Configuration	5-12
	F81967 Super IO Configuration – Serial Port 1 Configuration	5-13
	F81967 Super IO Configuration – Serial Port 2 Configuration	5-14
5.4.5	Advanced – Hardware Monitor.....	5-15
5.4.6	Advanced – F81967 Watchdog	5-16
5.4.7	Advanced – S5 RTC Wake Settings.....	5-17
5.4.8	Advanced – PTN3460 EDID Configuration	5-18
5.4.9	Advanced – USB Configuration.....	5-19
5.4.10	Advanced – Network Stack Configuration	5-20
5.4.11	Advanced – NVMe Configuration	5-21
5.5	Chipset	5-22
5.5.1	Chipset – System Agent (SA) Configuration	5-23
	System Agent (SA) Configuration – Memory Configuration	5-24
5.5.2	Chipset – PCH-IO Configuratioin	5-26
	PCH-IO Configuration – PCI Express Configuration.....	5-27
	PCH-IO Configuration – PCI Express Configuration – PCI Express Root Port 2 (I225 LAN).....	5-28
	PCH-IO Configuration – PCI Express Configuration – PCI Express	

Root Port 3 (I225 LAN)	5-29
PCH-IO Configuration – PCI Express Configuration – PCI Express	
Root Port 4 (Mini-PCIe)	5-30
PCH-IO Configuration – PCI Express Configuration – PCI Express	
Root Port 5 (M.2 M_KEY).....	5-31
PCH-IO Configuration – PCI Express Configuration – PCI Express	
Root Port 7 (M.2 E_KEY)	5-32
PCH-IO Configuration – SATA Configuration	5-33
5.6 Security	5-34
5.7 Boot	5-36
5.8 Save & Exit.....	5-37

Appendix A Technical SummaryA-1

BE-U830 Block Diagram.....	A-2
Interrupt Map	A-3
I/O MAP	A-15
Memory Map.....	A-17
Configuring WatchDog Timer	A-19
Flash BIOS Update.....	A-21

Revision History

The revision history of BE-U830 User Manual is described below:

Version No.	Revision History	Date
M1	Initial Release	2022/09/19

1 Introduction

This chapter provides the introduction for the BE-U830 system as well as the framework of the user manual.

The following topic is included:

- About This Manual

1.1 About This Manual

Thank you for purchasing our BE-U830 system. The BE-U830 provides faster processing speed, greater expandability and can handle more tasks than before. This manual is designed to assist you how to install and set up the whole system. It contains 5 chapters and 1 appendix. Users can configure the system according to their own needs. This user manual is intended for service personnel with strong hardware background. It is not intended for general users.

The following section outlines the structure of this user manual.

Chapter 1 Introduction

This chapter provides the introduction for the BE-U830 system as well as the framework of the user manual.

Chapter 2 Getting Started

This chapter describes the package contents and outlines BE-U830 specifications. Read the safety reminders carefully on how to take care of your system properly.

Chapter 3 Hardware Configuration

This chapter outlines the locations of the motherboard components and their respective functions. You will learn how to set the jumpers and configure the system to meet your own needs.

Chapter 4 Software Utilities

This chapter contains helpful information for proper installations of the Intel Chipset Software Installation Utility, Graphics Driver Utility, LAN Driver Utility, Sound Driver Utility and Intel® Management Engine Components Driver Installer.

Chapter 5 BIOS Setup

This chapter indicates you how to change the BIOS configurations.

Appendix A Technical Summary

This appendix provides the information about the allocation maps for BE-U830 block diagram, system resources, Watchdog Timer Configuration and Flash BIOS Update.

2 Getting Started

This chapter provides the information for the BE-U830 system. It describes the package contents and outlines the BE-U830 specifications.

The following topics are included:

- Package List
- BE-U830 Specification
- Safety Precautions

Experienced users can go to Chapter 3 Hardware Configuration on page 3-1 for a quick start.

2.1 Package List

If you discover any of the items listed below are damaged or lost, please contact your local distributor immediately.

Item	Q'ty
BE-U830	1
Quick Reference Guide	1
Manual / Driver DVD	1
Mini Jumper (2mm)	5
SATA HDD & Power Cable (180mm+210mm)	1
2-Pin lockable Terminal Block	1
Phillister Head Screw (For M.2 and mPCIe)	2

2.2 BE-U830 Specifications

System	
CPU	<ul style="list-style-type: none"> ➤ FCBGA1493 for Intel® Elkhart Lake Atom® / Pentium® / Celeron® SoC CPU ➤ Target TDP 9~15W ➤ Atom®: X6212RE, X6425RE ➤ Celeron®: J6412
Memory Support	➤ 1x DDR4 SO-DIMM, 3200MT/s up to 32GB (non-ECC)
Power Supply	➤ 2-Pin DC in terminal block, support DC 12/24V input
Dimensions	➤ 165 x 115 mm (6.5" x 4.5")
O.S. Support	➤ Windows® 10 64bit, Windows® 11, Linux
BIOS	➤ AMI UEFI BIOS
I/O Ports	
USB	8 ports: <ul style="list-style-type: none"> ➤ 2 x external USB 3.0 (rear I/O), ➤ 3 x external USB 2.0 (rear I/O), ➤ 2 x internal USB 2.0 (pin header) ➤ 1 x internal USB 2.0 (wafer)
Serial Ports	2 x COM ports <ul style="list-style-type: none"> ➤ COM1: RS-232/422/485, support 5V/12V by jumper selection ➤ COM2: RS-232/422/485.
LAN	<ul style="list-style-type: none"> ➤ Dual 2.5GbE LAN (2xRJ45 on rear I/O) ➤ Supports Wake-On-LAN ➤ Controller: 2 x Intel I225-IT
GPIO	➤ 8 in / 8 out (pin header)
SATA Interface	➤ 1 x SATA III port (6.0Gb/sec)
Expansion Slots	<ul style="list-style-type: none"> ➤ 1 x full-sized mPCIe slot (with PCIe and USB signals) ➤ 1 x M.2 slot M-Key NVMe (PCIeX2), supports 2280 size only.

Display	
Display	<ul style="list-style-type: none"> ➤ 1 x DP (rear I/O) up to 4096 x 2304 @60Hz (default) ➤ 1 x HDMI (rear I/O) up to 4096 x 2160 @60Hz (default) ➤ 1 x LVDS (internal) 1 /2 channel 18/24bits
LVDS Backlight	<ul style="list-style-type: none"> ➤ JINV 5-pin connector supports <u>12V, PWM</u> for panel backlight power/dimming: <ul style="list-style-type: none"> - PWM's voltage level is 3.3V/5V (selected by jumper, default: 3.3V) - PWM's duty cycle can be controlled by Windows and Protech's utility (from API) - BLEN pin voltage is 3.3V only
Front Panel	<ul style="list-style-type: none"> ➤ 1x 1x2 wafer for Power LED. ➤ 1x 1x2 wafer for Power Button.
Power Mode	
Power Mode	<ul style="list-style-type: none"> ➤ Power on mode: <ul style="list-style-type: none"> - BIOS Power fail "on": boot-up when AC power returns from "Off" to "On" (default) - BIOS Power fail "off": non-boot-up when AC power returns from "Off" to "On" ➤ Way to Boot-Up from S5: <ul style="list-style-type: none"> (1) Power Button (2) Wake-On-LAN (3) RTC-wake (set by BIOS) ➤ Way to Shutdown to S5/S4/S3: <ul style="list-style-type: none"> (1) Power Button (2) OS command ➤ Supports S0/S3/S4/S5 Note: BIOS default setting: BIOS Power fail "On".
Others	
Sound	<ul style="list-style-type: none"> ➤ Line In / Line Out / MIC In (onboard pin header) ➤ Codec IC: Realtek ALC888 (High Definition Codec)
Other I/O, Bus Function	<ul style="list-style-type: none"> ➤ 1 x 4-pin FAN connector (with speed control/monitoring by API / BIOS)
Battery	<ul style="list-style-type: none"> ➤ 2-pin wafer ➤ Supports battery voltage monitoring ➤ Can be still boot-up no matter when battery voltage is too low or no battery
Software Support	<ul style="list-style-type: none"> ➤ Hardware Monitor API/utility (for Temp) ➤ WatchDog API ➤ GPIO setting API/utility

	<ul style="list-style-type: none">➤ Panel Backlight Brightness Control API /utility➤ Panel Backlight ON-OFF Control API / utility➤ OS: Windows10 64bit, Windows 11, Linux➤ Supports fTPM function which can be enabled by BIOS (default: Disabled)➤ Hardware TPM reserved, need customized BOM.
Environment	
EMC & Safety	➤ CE / FCC
Operating Temp.	➤ Celeron[®], Pentium[®] : 0°C~60°C: with standard heatsink ➤ ATOM[®] : -40°C~85°C: with standard heatsink
Storage Temp.	➤ -40°C ~ 85°C
Humidity	➤ 20%~ 90%

2.3 Safety Precautions

Follow the instructions below to avoid your system from damages:

1. Keep your system away from static electricity on all occasions.
2. Prevent electric shock. Don't touch any components of this board when it is powered on. Always disconnect power when the system is not in use.
3. Disconnect power source when you change any hardware devices.
For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

3 **Hardware Configuration**

This chapter contains helpful information about the jumper & connector settings, and component locations.

The following sections are included:

- Jumper & Connector Quick Reference Table
- Component Locations
- Configuration and Jumper Settings
- Connector Pin Assignments


3.1 Jumper & Connector Quick Reference Table

JUMPER Description	NAME
Clear CMOS Data Selection	JCOMS1
COM1 Port Voltage Selection	JP_COM1
Low Pin Count Selection	JP_LPC1
USB1 Port Power Selection	JP_USB1
LVDS Voltage Selection	JP_VDD1
LVDS Sequence Selection	JP1
LVDS Backlight Control Selection	JP7

CONNECTOR Description	NAME
DC In 2 Pins Terminal Block	DC In
Dual LAN Ports	LAN1, LAN2
3 x 1 USB 2.0 Ports	USB2
Dual USB 3.0 Ports	USB1
Display Port (DP) Port Connector	JDP_HDMI1
HDMI Connector	JDP_HDMI1
COM1 and COM2 Connectors	JCOM1, JCOM2
2 x Internal USB 2.0 Pin Headers	JUSB1
Internal USB 2.0 Wafer	JUSB2
Digital Input / Output Connectors	JDIO1, JDIO2
HD Audio Connector	JAUDIO1
Power Input Connector	PWR2
Mini PCI Express Slot	M_PCIE1
Micro SIM Card Socket (bottom side of the main board)	SIM1
LVDS Inverter Connector	JINV1
LVDS Connector	LVDS1
M.2 Wi-Fi Express Slot (option)	M2_E1
M.2 SSD Express Slot	M2_M1
Serial ATA (SATA) 3.0 connector	SATA1
HDD Power Connector	JHD_PWR1
RTC Connector	JBAT1
Power LED Connector	JLED1
Power Button Connector	JBTN1

3.2 Component Locations

3.2.1 BE-U830 Top View

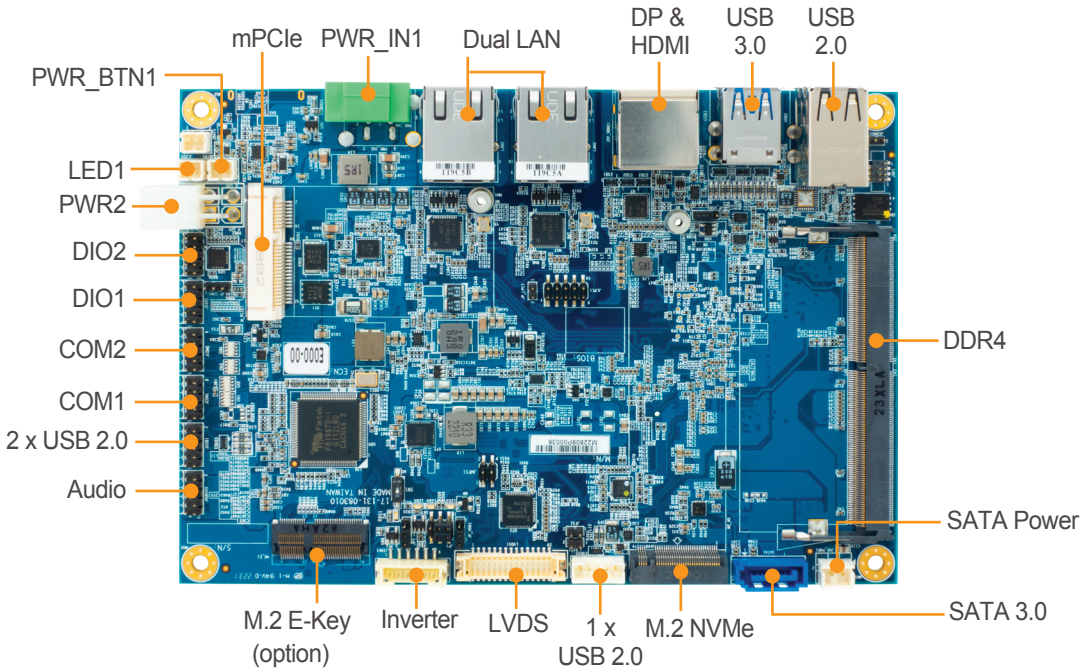

	<p>WARNING: Always disconnect the power cord when you are working with connectors and jumpers on BE-U830. Make sure both the system and peripheral devices are turned OFF as sudden surge of power could damage sensitive components. Make sure the board is properly grounded.</p>
	<p>CAUTION: Observe precautions while handling electrostatic sensitive components. Make sure to ground yourself to prevent static charge while you are working on the connectors and jumpers. Use a grounding wrist strap and place all electronic components in any static-shielded devices.</p>

3.2.2 BE-U830 Jumper Setting

1. Clear CMOS Data Selection (JCOMS1)



Step 1. Remove the main power of the PC.


Step 2. Close JCOMS1 (pins 1-2) for 6 seconds by a cap.

Step 3. Remove the cap which is just used on JCOMS1 (1-2), so that JCOMS1 returns to “OPEN”.




Step 4. Power on the PC and the PC will then auto-reboot for once in order to set SoC’s register.


Step 5. Done!

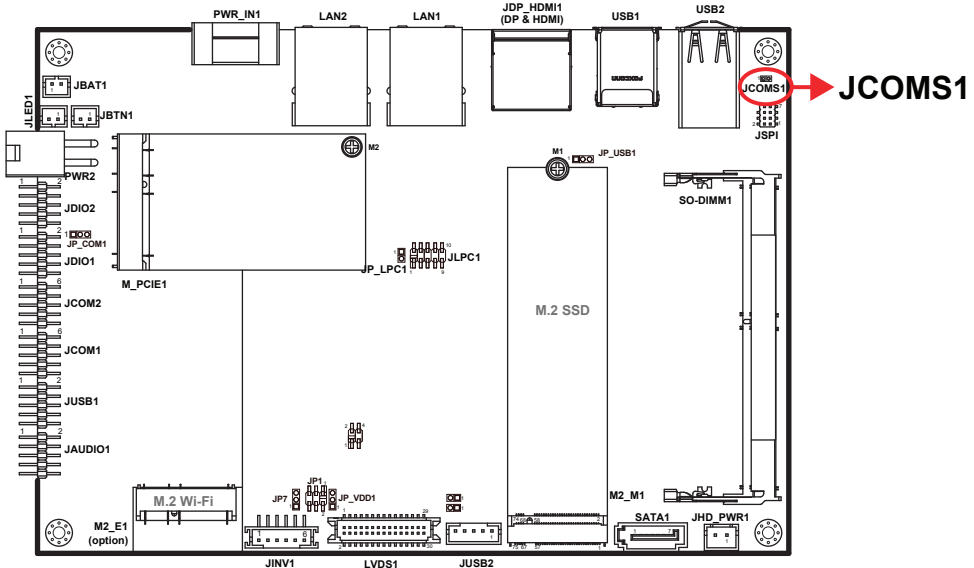Selection	Jumper Setting	Jumper Illustration
Normal	Open <i>(Default Setting)</i>	 JCOMS1
Clear CMOS*	1-2	 JCOMS1






2. COM1 Port Voltage Selection (JP_COM1)

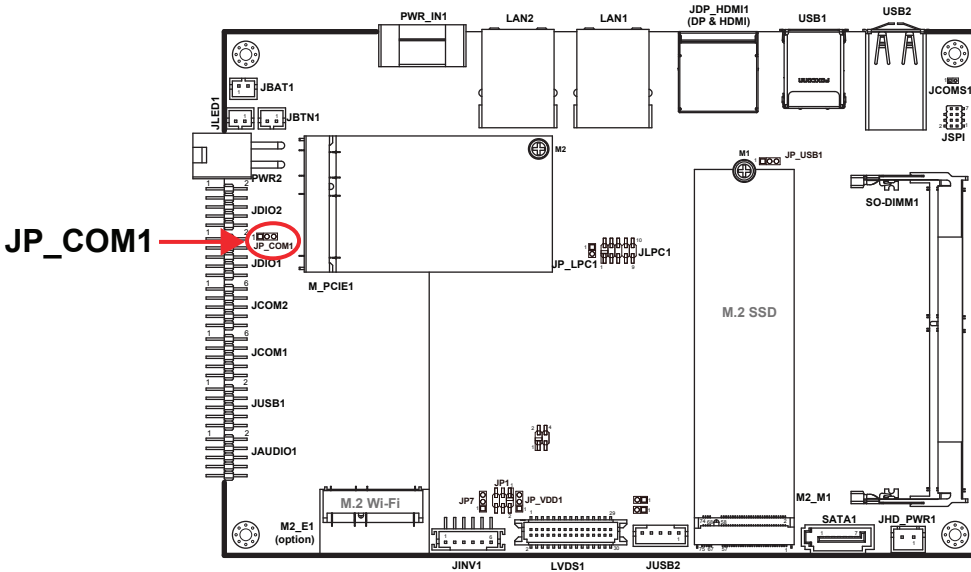Selection	Jumper Setting	Jumper Illustration
NC	<i>Open</i> <i>(Default Setting)</i>	 <p>JP_COM1</p>
5V	1-2	 <p>JP_COM1</p>
12V	2-3	 <p>JP_COM1</p>





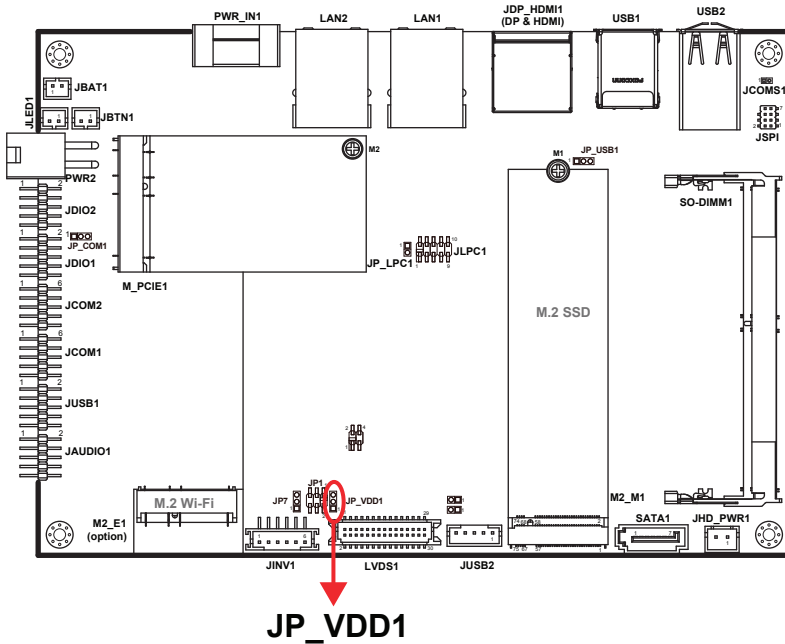
3. USB1 Port Power Selection (JP_USB1)

Selection	Jumper Setting	Jumper Illustration
S5 , USB Power=0V	1-2 (Default Setting)	 JP_USB1
S5, USB Power=5V	2-3	 JP_USB1

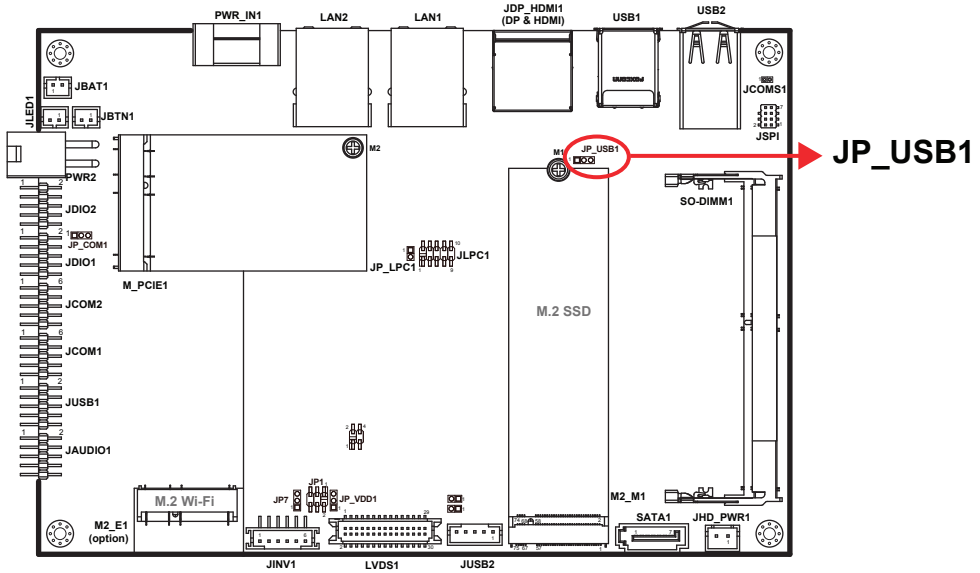



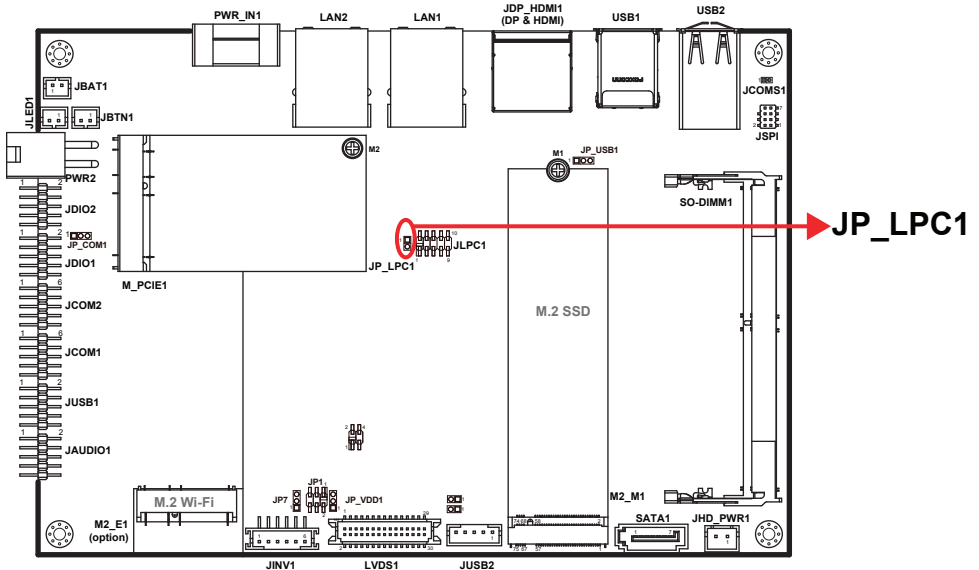
4. LVDS Voltage Selection (JP_VDD1)

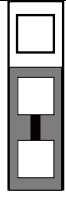Selection	Jumper Setting	Jumper Illustration
3.3V	1-2 <i>(Default Setting)</i>	 JP_VDD1
5V	2-3	 JP_VDD1








5. Low Pin Count Selection (JP_LPC1)

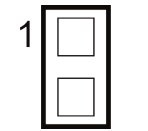Selection	Jumper Setting	Jumper Illustration
80 Port	Open <i>(Default Setting)</i>	 <p>JP_LPC1</p>
LPC Device	1-2	 <p>JP_LPC1</p>





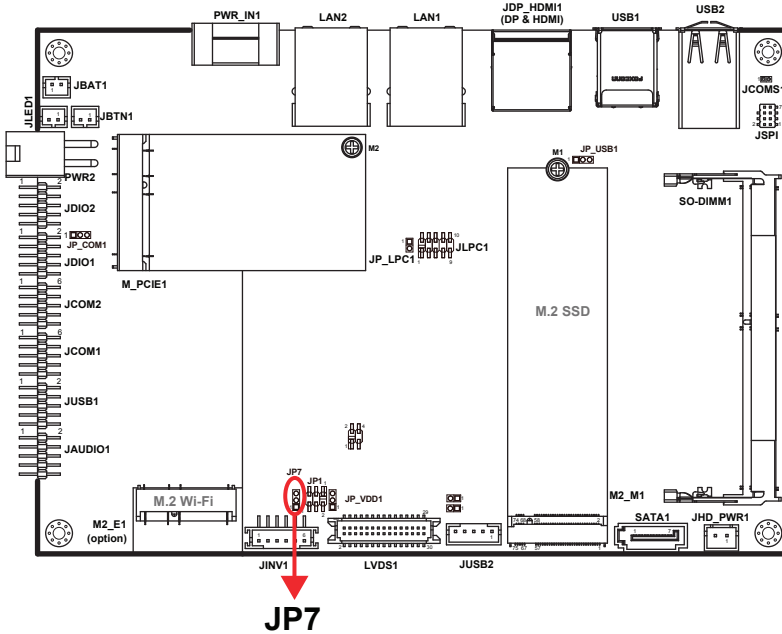
6. LVDS Sequence Selection (JP1)

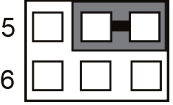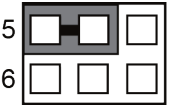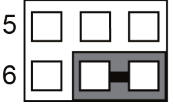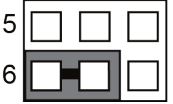Selection	Jumper Setting	Jumper Illustration
BKLTCTL from CPU CPU	1-3 (Default Setting)	 <p>JP1</p>
BKLTCTL from PTN3460I	3-5	 <p>JP1</p>
BKLTEN from CPU	2-4 (Default Setting)	 <p>JP1</p>
BKLTEN from PTN3460I	4-6	 <p>JP1</p>

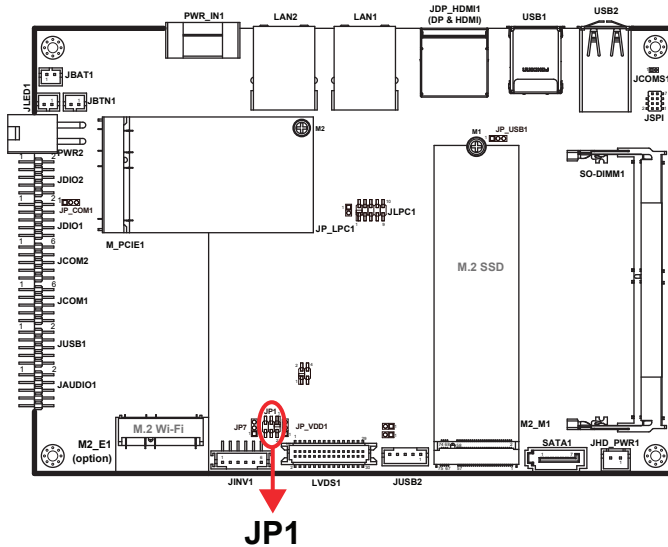


7. LVDS Backlight Control Selection (JP7)

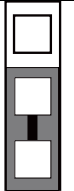
Selection	Jumper Setting	Jumper Illustration
3.3V	1-2 <i>(Default Setting)</i>	 1 JP7
5V	2-3	 1 JP7



3.2.3 BE-U830 Bottom View

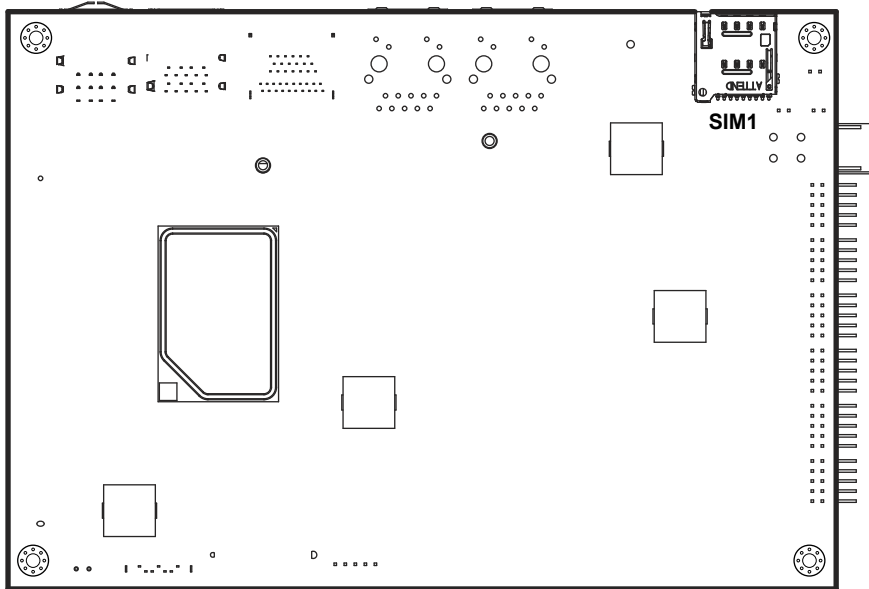

3.2.4 BE-U830 I/O View

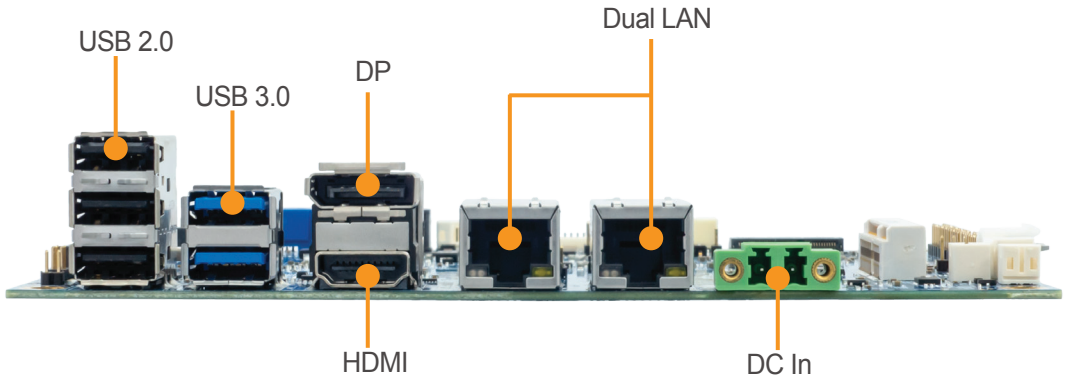


3.3 HOW TO SET JUMPERS

You can configure your board by setting jumpers. A jumper consists of two or three metal pins with a plastic base mounted on the board. By using a small plastic "cap", (also known as the jumper cap (with a metal contact inside)), you are able to connect the pins. So you can set up your hardware configuration by "opening" or "closing" pins.

The jumper can be combined into sets that are called jumper blocks. When the jumpers are all in the block, you have to put them together to set up the hardware configuration. The figure below shows how this looks like.

JUMPERS AND CAPS

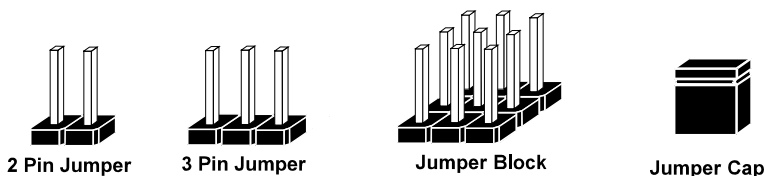


If a jumper has three pins (for examples, labeled PIN1, PIN2, and PIN3), you can connect PIN1 & PIN2 to create one setting by shorting. You can either connect PIN2 & PIN3 to create another setting. The same jumper diagrams are applied all through this manual. The figure below illustrates what the jumper diagrams look and what they represent.


Jumper Diagrams



Jumper Cap
looks like this




2 pin Jumper
looks like this



3 pin Jumper
looks like this



Jumper Block
looks like this



Jumper Settings



2 pin Jumper close(enabled)
Looks like this



1

1



3 pin Jumper
2-3 pin close(enabled)
Looks like this




1

1



Jumper Block
1-2 pin close(enabled)
Looks like this



1 2

1 2


3.4 I/O Ports

3.4.1 DC In 2 Pins Terminal Block (PWR_IN1)

Connector Location: PWR_IN1

Description: DC In 2 Pins Terminal Block (lockable) (rear I/O)

PIN	ASSIGNMENT
1	DCIN
2	GND

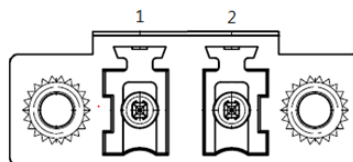


PWR_IN1

3.4.2 Dual LAN Ports (LAN1, LAN2)

Connector Location: LAN1, LAN2

Description: LAN Port, RJ45 (rear I/O)

PIN	ASSIGNMENT
1	LAN1/2_MDIP0
2	LAN1/2_MDIN0
3	LAN1/2_MDIP1
4	LAN1/2_MDIP2
5	LAN1/2_MDIN2
6	LAN1/2_MDIN1
7	LAN1/2_MDIP3
8	LAN1/2_MDIN3

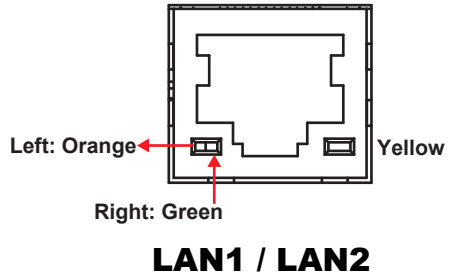

LAN1/2 LED Indicator:

Left Side LED

Green Color On	2500 LAN Speed Indicator
Orange Color On	1000 LAN Speed Indicator
Off	10/100 or No LAN connected

Right Side LED

Yellow Color Blinking	LAN Message Active
Off	No LAN Message Active


3.4.3 3 x 1 USB 2.0 Ports (USB2)

Connector Location: USB2

Description: USB 2.0 Type A Ports x 3 (rear I/O)

USB 2.0 signals

PIN	ASSIGNMENT
1	VCC5_USB23
2	USB2_P2_DN
3	USB2_P2_DP
4	GND
5	VCC5_USB23
6	USB2_P3_DN
7	USB2_P3_DP
8	GND
9	VCC5_USB23
10	USB2_P4_DN
11	USB2_P4_PN
12	GND

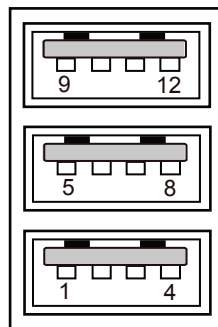

USB2


3.4.4 Dual USB 3.0 Ports (USB1)

Connector Location: USB1

Description: USB 3.0 Type A Ports (rear I/O)

USB 3.0

PIN	ASSIGNMENT	PIN	ASSIGNMENT
A1	VCC5_USB1	B1	VCC5_USB1
A2	USB2_P1_DN	B2	USB2_P0_DN
A3	USB2_P1_DP	B3	USB2_P0_DP
A4	GND	B4	GND
A5	USB3_RXN1	B5	USB3_RXN0
A6	USB3_RXP1	B6	USB3_RXP0
A7	GND	B7	GND
A8	USB3_TXN1	B8	USB3_TXN0
A9	USB3_TXP1	B9	USB3_TXP0

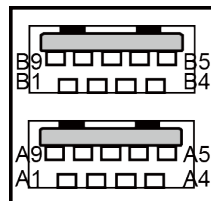


**USB1
(USB3.0)**

3.4.5 Display Port (DP) Port Connector (JDP_HDMI1)

Connector Location: JDP_HDMI1

Description: DisplayPort Connector (DP) (rear I/O)

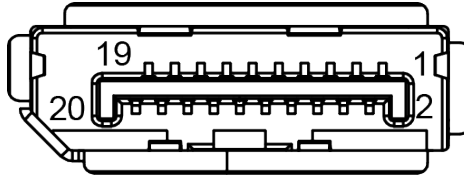

DP


DP signals:

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	DP TX0 DP	2	GND
3	DP TX0 DN	4	DP TX1 DP
5	GND	6	DP TX1 DN
7	DP TX2 DP	8	GND
9	DP TX2 DN C	10	DP TX3 DP C
11	GND	12	DP TX3 DN
13	DP AUX ENJ	14	GND
15	DP AUX P	16	GND
17	DP AUX N	18	HPD DP
19	GND	20	V3P3 DPPWR

3.4.6 HDMI Connector (JDP_HDMI1)

Connector Location: JDP_HDMI1

Description: HDMI Port Connector (HDMI) (rear I/O)

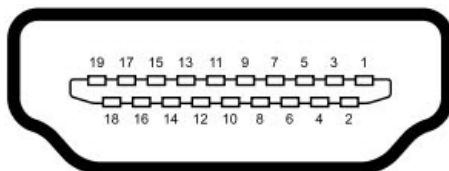

HDMI

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	HDMI_P2	2	GND
3	HDMI_N2	4	HDMI_P1
5	GND	6	HDMI_N1
7	HDMI_P0	8	GND
9	HDMI_N0	10	HDMI_CLKP
11	GND	12	HDMI_CLKN
13	NC	14	NC
15	HDMI_SCL	16	HDMI_SDA
17	GND	18	V5P0_HDMI
19	HDMI_HPD	20	-


3.5 SETTING CONNECTORS AND JUMPERS

3.5.1 COM1 and COM2 Connector (JCOM1, JCOM2)

Connector Location: JCOM1 and JCOM2

Description: COM1 and COM2 Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	COM1/2_DCD	6	COM1/2_DSR
2	COM1/2_RX	7	COM1/2_RTS
3	COM1/2_TX	8	COM1/2_CTS
4	COM1/2_DTR	9	COM1/2_DCOUT
5	GND	10	NC

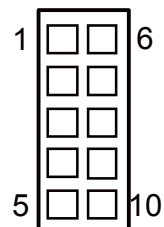


**JCOM1 /
JCOM2**

3.5.2 2 x Internal USB 2.0 Pin Headers (JUSB1)

Connector Location: JUSB1

Description: 2 x Internal USB 2.0 Pin Headers

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	VCC5_USB56	2	VCC5_USB56
3	USB2_P5_DN	4	USB2_P6_DN
5	USB2_P5_DP	6	USB2_P6_DP
7	GND	8	GND
9	GND	10	GND

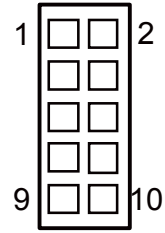


JUSB1

3.5.3 Internal USB 2.0 Wafer (JUSB2)

Connector Location: JUSB2

Description: Internal USB 2.0 Wafer

PIN	ASSIGNMENT
1	VCC5_USB7
2	USB2_P7_DN
3	USB2_P7_DP
4	GND
5	GND




JUSB2

3.5.4 Digital Input / Output Connectors (JDIO1, JDIO2)

Connector Location: JDIO1

Description: Digital Input / Output Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	V5P0_PWROUT	2	V5P0_PWROUT
3	GND	4	GND
5	DIN_0	6	DOUT_0
7	DIN_1	8	DOUT_1
9	DIN_2	10	DOUT_2

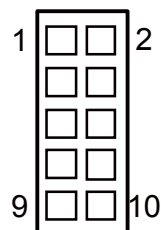


JDIO1

Connector Location: JDIO2

Description: Digital Input / Output Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	DIN_3	2	DOUT_3
3	DIN_4	4	DOUT_4
5	DIN_5	6	DOUT_5
7	DIN_6	8	DOUT_6
9	DIN_7	10	DOUT_7

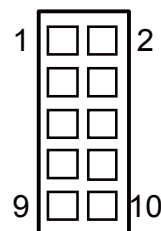


JDIO2

3.5.5 HD Audio Connector (JAUDIO1)

Connector Location: JAUDIO1

Description: HD Audio Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	HD_MIC-L	2	HD_MIC1-R
3	HD_GND	4	HD_GND
5	HD_LINE-IN-L	6	HD_LINE-IN-R
7	HD_GND	8	HD_GND
9	LINE-OUT-L	10	LINE-OUT-R

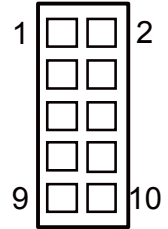


JAUDIO1

3.5.6 Power Input Connector (PWR2)

Connector Location: PWR2

Description: Power Input Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	GND
3	DCOUT / DCIN	4	DCOUT / DCIN

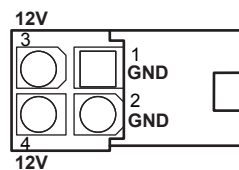

PWR2

Note 1: When PWR_IN1 is mounted, PWR2 is DCOUT.


Note 2: When PWR_IN1 is NC, PWR2 is DCIN.

3.5.7 Mini PCI Express Slot (M_PCIE1)

Connector Location: M_PCIE1

Description: Mini PCI Express Slot

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	WAKE_N	2	V3P3A
3	NC	4	GND
5	NC	6	VCC1_5_M_PCIE
7	PCIE_CLKREQ2_N	8	NC
9	GND	10	NC
11	M_PCIE_CLKN	12	NC
13	M_PCIE_CLKP	14	NC
15	GND	16	NC
17	SIM1_C8	18	GND
19	SIM1_C4	20	NC
21	GND	22	BUF_PLT_RST_N
23	PCIE_P3_RXN	24	V3P3A
25	PCIE_P3_RXP	26	GND
27	GND	28	VCC1_5_M_PCIE
29	GND	30	SMB_CLK
31	PCIE_P3_TXN	32	SMB_DATA
33	PCIE_P3_TXP	34	GND
35	GND	36	USB2_P8_DN
37	GND	38	USB2_P8_DP
39	V3P3A	40	GND
41	V3P3A	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	VCC1_5_M_PCIE
49	NC	50	GND
51	NC	52	V3P3A

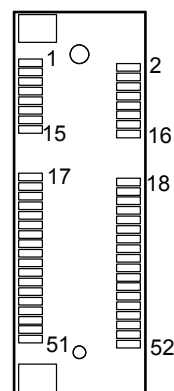


M_PCIE1

3.5.8 Micro SIM Card Socket (SIM1)

Connector Location: SIM1

Description: Micro SIM Push/Push type (located on the bottom side of the main board)

PIN	ASSIGNMENT
P1	SIM1_PWR
P5	GND
P2	SIM1_RESET
P6	SIM1_VPP
P3	SIM1_CLK
P7	SIM1_DATA
P4	SIM1_C4
P8	SIM1_C8
CD	-

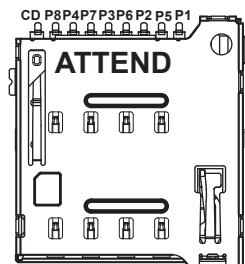


SIM1

3.5.9 LVDS Inverter Connector (JINV1)

Connector Location: JINV1

Description: LVDS Inverter Connector

PIN	ASSIGNMENT
1	VCC12
2	VCC12
3	GND
4	LVDS_BKLCTL
5	GND
6	LVDS_BKLTEN




JINV1

3.5.10 LVDS Connector (LVDS1)

Connector Location: LVDS1

Description: LVDS Inverter Connector

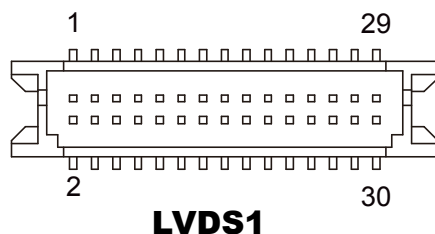


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	LVDS_VCC	2	GND
3	LVDS_CLKB_DN	4	LVDS_CLKB_DP
5	GND	6	LVDS_B2_DN
7	LVDS_B2_DP	8	GND
9	LVDS_B1_DN	10	LVDS_B1_DP
11	LVDS_B3_DP	12	LVDS_B3_DN
13	LVDS_B0_DP	14	LVDS_B0_DN
15	GND	16	LVDS_CLKA_DP
17	LVDS_CLKA_DN	18	GND
19	LVDS_A2_DP	20	LVDS_A2_DN
21	GND	22	LVDS_A1_DP
23	LVDS_A1_DN	24	GND
25	LVDS_A0_DP	26	LVDS_A0_DN
27	LVDS_A3_DP	28	LVDS_A3_DN
29	LVDS_VCC	30	LVDS_VCC

3.5.11 M.2 Wi-Fi Express Slot (M2_E1) (option)

Connector Location: M2_E1

Description: M.2 Wi-Fi Express Slot

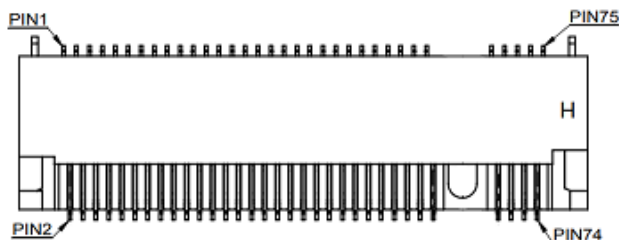

M2_E1 (option)


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	V3P3
3	USB2 P9 DP	4	V3P3
5	USB2 P9 DN	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	NC	14	NC
15	NC	16	NC
17	NC	18	GND
19	NC	20	NC
21	NC	22	NC
23	NC	24	NC
25	NC	26	NC
27	NC	28	NC
29	NC	30	NC
31	NC	32	NC
33	GND	34	NC
35	PCIE P6 TXP	36	NC
37	PCIE P6 TXN	38	NC
39	GND	40	NC
41	PCIE P6 RXP	42	NC
43	PCIE P6 RXN	44	NC
45	GND	46	NC
47	M2_E CLKP	48	NC
49	M2_E CLKN	50	NC
51	GND	52	BUF_PLT_RST_N
53	PCIE_CLKREQ1_N	54	M2_E_BT_WISABLE2

PIN	ASSIGNMENT	PIN	ASSIGNMENT
55	WAKE_N	56	M2_E_WLAN_WISABLE1
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	GND	64	NC
65	NC	66	NC
67	NC	68	NC
69	GND	70	NC
71	NC	72	V3P3
73	NC	74	V3P3
75	GND	-	-

3.5.12 M.2 SSD Express Slot (M2_M1)

Connector Location: M2_M1

Description: M.2 SSD KEY M Slot

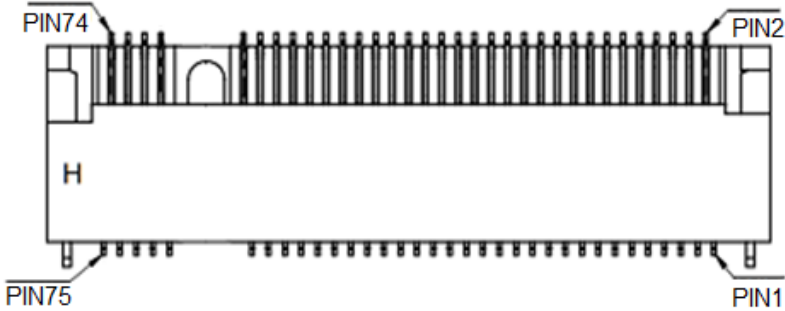

M2_M1

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	V3P3
3	GND	4	V3P3
5	NC	6	NC
7	NC	8	NC
9	GND	10	NC
11	NC	12	V3P3
13	NC	14	V3P3
15	GND	16	V3P3
17	NC	18	V3P3
19	NC	20	NC
21	GND	22	NC
23	NC	24	NC
25	NC	26	NC
27	GND	28	NC
29	PCIE P5 RXN	30	NC
31	PCIE P5 RXP	32	NC
33	GND	34	NC
35	PCIE P5 TXN	36	NC
37	PCIE P5 TXP	38	NC
39	GND	40	NC
41	PCIE P4 RXN	42	NC
43	PCIE P4 RXP	44	NC
45	GND	46	NC


PIN	ASSIGNMENT	PIN	ASSIGNMENT
47	PCIE_P4_TXN	48	NC
49	PCIE_P4_TXP	50	BUF_PLT_RST_N
51	GND	52	PCIE_CLKREQ0_N
53	M2_M_CLKN	54	WAKE_N
55	M2_M_CLKP	56	NC
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	NC	68	NC
69	NC	70	V3P3
71	GND	72	V3P3
73	GND	74	V3P3
75	GND	-	-

3.5.13 SATA 3.0 & HDD Power Connectors (SATA1, JHD_PWR1)

Connector Location: SATA1

Description: Serial ATA 3.0 connector

PIN	ASSIGNMENT
1	GND
2	SATA_TXP0
3	SATA_TXN0
4	GND
5	SATA_RXN0
6	SATA_RXP0
7	GND

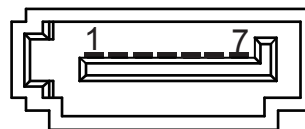


SATA1

Connector Location: JHD_PWR1

Description: HDD Power Connector

PIN	ASSIGNMENT
1	V5P0
2	GND

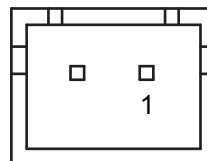


JHD_PWR1

3.5.14 RTC Connector (JBAT1)

Connector Location: JBAT1

Description: RTC Connector

PIN	ASSIGNMENT
1	BAT
2	GND

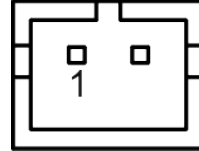


JBAT1

3.5.15 Power LED Connector (JLED1)

Connector Location: JLED1

Description: Power LED Connector

PIN	ASSIGNMENT
1	JLED_V5P0
2	GND

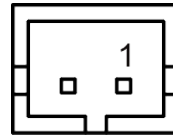


JLED1

3.5.16 Power Button Connector (JBTN1)

Connector Location: JBTN1

Description: Power Button Connector

PIN	ASSIGNMENT
1	PWRBTN_N
2	GND

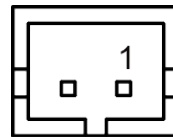




JBTN1

3.5.17 COM1 Port Voltage Selection (JP_COM1)

Jumper Location: JP_COM1



Description: COM1 Port Voltage Selection

Selection	Jumper Setting	Jumper Illustration
NC	<i>Open (Default Setting)</i>	 <p>JP_COM1</p>
5V	1-2	 <p>JP_COM1</p>
12V	2-3	 <p>JP_COM1</p>

3.5.18 USB1 Port Power Selection (JP_USB1)

Jumper Location: JP_USB1



Description: USB1 Port Power Selection

Selection	Jumper Setting	Jumper Illustration
<p>S5 , USB Power=0V</p>	<p>1-2 <i>(Default Setting)</i></p>	<p>1  JP_USB1</p>
<p>S5, USB Power=5V</p>	<p>2-3</p>	<p>1  JP_USB1</p>

3.5.19 LVDS Voltage Selection (JP_VDD1)

Jumper Location: JP_VDD1



Description: LVDS Voltage Selection

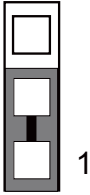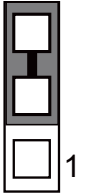Selection	Jumper Setting	Jumper Illustration
3.3V	1-2 <i>(Default Setting)</i>	 <p style="text-align: center;">JP_VDD1</p>
5V	2-3	 <p style="text-align: center;">JP_VDD1</p>

3.5.20 Low Pin Count Selection (JP_LPC1)

Jumper Location: JP_LPC1





Description: Low Pin Count Selection

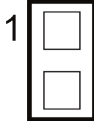Selection	Jumper Setting	Jumper Illustration
80 Port	Open <i>(Default Setting)</i>	 <p>JP_LPC1</p>
LPC Device	1-2	 <p>JP_LPC1</p>

3.5.21 LVDS Sequence Selection (JP1)

Connector Location: JP1



Description: LVDS Sequence Selection

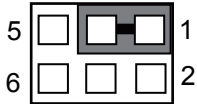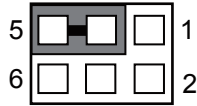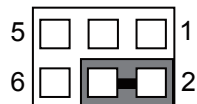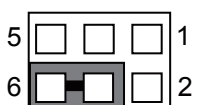Selection	Jumper Setting	Jumper Illustration
BKLTCTL from CPU CPU	1-3 <i>(Default Setting)</i>	 <p>JP1</p>
BKLTCTL from PTN3460I	3-5	 <p>JP1</p>
BKLTEN from CPU CPU	2-4 <i>(Default Setting)</i>	 <p>JP1</p>
BKLTEN from PTN3460I	4-6	 <p>JP1</p>

3.5.22 LVDS Backlight Control Selection (JP7)

Jumper Location: JP7

Description: LVDS Backlight Control Selection

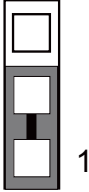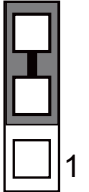Selection	Jumper Setting	Jumper Illustration
3.3V	1-2 <i>(Default Setting)</i>	 <p style="text-align: center;">JP7</p>
5V	2-3	 <p style="text-align: center;">JP7</p>

3.5.23 Clear CMOS Data Selection (JCOMS1)

Jumper Location: JCOMS1

Description: Clear CMOS Data Selection



Step 1. Remove the main power of the PC.

Step 2. Close JCOMS1 (pins 1-2) for 6 seconds by a cap.

Step 3. Remove the cap which is just used on JCOMS1 (1-2), so that JCOMS1 returns to “OPEN”.

Step 4. Power on the PC and the PC will then auto-reboot for once in order to set SoC’s register.

Step 5. Done!

Selection	Jumper Setting	Jumper Illustration
Normal	Open <i>(Default Setting)</i>	 JCOMS1
Clear CMOS*	1-2	 JCOMS1

Note: Please make sure the main power is off before you clear CMOS data.

4 Software Utilities

This chapter provides the detailed information that guides users to install driver utilities for the system. The following topics are included:

- Installing Intel[®] Chipset Software Installation Utility
- Installing Graphics Driver Utility
- Installing LAN Driver Utility
- Installing Sound Driver Utility
- Installing Intel[®] Management Engine Components Driver Installer

4.1 Introduction

Enclosed with the BE-U830 Series package is our driver utilities contained in a DVD-ROM disk. Refer to the following table for driver locations:

Filename (Assume that DVD-ROM drive is D :)	Purpose
D:\Driver\Platform\1_Main Chip\Win10(64Bit)	Intel® Chipset Device Software installer
D:\Driver\Platform\2_Graphics\Win10(64Bit)	Intel® HD Graphics installer
D:\Driver\Platform\3_Sound\Win10(64Bit)	Realtek® ALC888S HD Audio Driver installer
D:\Driver\Platform\4_ME\Win10(64Bit)	Intel® Management Engine Components installer
D:\Driver\Platform\5_LAN Chip\Win10(64Bit)	Intel® Network Connections Software

Note: Install the driver utilities immediately after the OS installation is completed.

For more details on the installation sequence, refer to the Readme.txt file.

4.2 Installing Intel® Chipset Software Installation Utility

Introduction

The Intel® Chipset Software Installation Utility installs the Windows *.INF files to the target system. These files outline to the operating system how to configure the Intel chipset components in order to ensure that the following functions work properly:

- Core PCI and ISAPNP Services
- PCI-e Support
- SATA Storage Support
- USB Support
- Identification of Intel® Chipset Components in the Device Manager

Intel® Chipset Software Installation Utility

The utility pack is to be installed only for Windows 10 (64-bit), and it should be installed immediately after the OS installation is finished. Please follow the steps below:

- 1** Connect the USB DVD-ROM device to BE-U830 and insert the driver disk.
- 2** Enter the **Main Chip** folder where the Chipset driver is located.
- 3** Click **SetupChipset.exe** file for driver installation.
- 4** Follow the on-screen instructions to install the driver.
- 5** Once the installation is completed, shut down the system and restart BE-U830 for the changes to take effect.

4.3 Installing Graphics Driver Utility

To install the Graphics driver utility, follow the steps below:

- 1** Connect the USB DVD-ROM device to BE-U830 and insert the driver disk.
- 2** Enter the **Graphics** folder where the driver is located.
- 3** Click the **Installer.exe** file for driver installation.
- 4** Follow the on-screen instructions to complete the installation.
- 5** Once the installation is completed, shut down the system and restart BE-U830 for the changes to take effect.

4.4 Installing LAN Driver Utility

Enhanced with LAN function, BE-U830 supports various network adapters. To install the LAN Driver, follow the steps below:

- 1** Connect the USB DVD-ROM device to BE-U830 and insert the driver disk.
- 2** Enter the **LAN Chip** folder where the driver is located.
- 3** Click **Wired_driver_27.0_x64.exe** file for driver installation.
- 4** Follow the on-screen instructions to complete the installation.
- 5** Once the installation is completed, shut down the system and restart BE-U830 for the changes to take effect.

4.5 Installing Sound Driver Utility

To install the Sound Driver, follow the steps below:

- 1** Connect the USB DVD-ROM device to BE-U830 and insert the driver disk.
- 2** Open the **Sound** folder where the driver is located.
- 3** Click the **Setup.exe** file for driver installation.
- 4** Follow the on-screen instructions to complete the installation.
- 5** Once the installation is completed, shut down the system and restart BE-U830 for the changes to take effect.

4.6 Installing Intel® Management Engine Components Driver Installer

Installation Instructions for Intel® Management Engine Components Driver Installer

- 1 Connect the USB DVD-ROM device to BE-U830 and insert the driver disk.
- 2 Enter the **ME** folder where the driver is located.
- 3 Click **SetupME.exe** file for ME driver installation.
- 4 Follow the on-screen instructions to complete the installation.
- 5 Once the installation is completed, shut down the system and restart BE-U830 for the changes to take effect.

5 BIOS SETUP

This chapter guides users how to configure the basic system configurations via the BIOS Setup Utilities. The information of the system configuration is saved in BIOS NVRAM so that the Setup information is retained when the system is powered off. The BIOS Setup Utilities consist of the following menu items:

- Main Menu
- Advanced Menu
- Chipset Menu
- Security Menu
- Boot Menu
- Save & Exit Menu

5.1 Introduction

The **BE-U830** board uses an AMI (American Megatrends Incorporated) Aptio BIOS that is stored in the Serial Peripheral Interface Flash Memory (SPI Flash) and can be updated. The SPI Flash contains the built-in BIOS setup program, Power-On Self-Test (POST), PCI auto-configuration utility, LAN EEPROM information, and Plug and Play support.

Aptio is AMI's BIOS firmware based on the UEFI (Unified Extensible Firmware Interface) specifications and the Intel Platform Innovation Framework for EFI. The UEFI specification defines an interface between the operating system and platform firmware. The interface consists of data tables that contain platform-related information, boot service calls, and runtime service calls that are available to the operating system and its loader. These elements have combined to provide a standard environment for booting the operating system and running pre-boot applications.

The diagram below shows the Extensible Firmware Interface's location in the software stack.

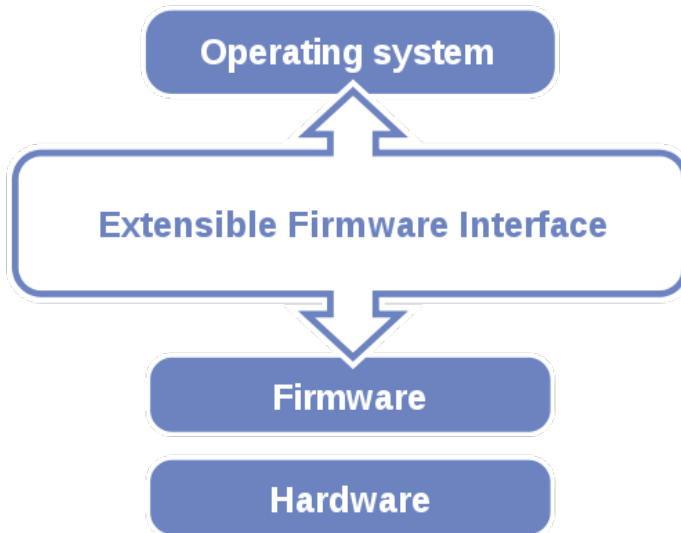


Figure 5-1. Extensible Firmware Interface Diagram

EFI BIOS provides an user interface that allows you to modify hardware configuration, e.g. change the system date and time, enable/disable a system component, determine bootable device priority, set up personal password, etc., which is convenient for engineers to perform modifications and customize the computer

system and allows technicians to troubleshoot the occurred errors when the hardware is faulty.

The BIOS setup menu allows users to view and modify the BIOS settings for the computer. After the system is powered on, users can access the BIOS setup menu by pressing or <Esc> immediately while the POST message is running before the operating system is loading.

All the menu settings are described in details in this chapter.


5.2 Accessing Setup Utility

After the system is powered on, BIOS will enter the Power-On Self-Test (POST) routines and the POST message will be displayed:



Figure 5-2. POST Screen with AMI Logo

Press or <Esc> to access the Setup Utility program and the **Main** menu of the Aptio Setup Utility will appear on the screen as below:

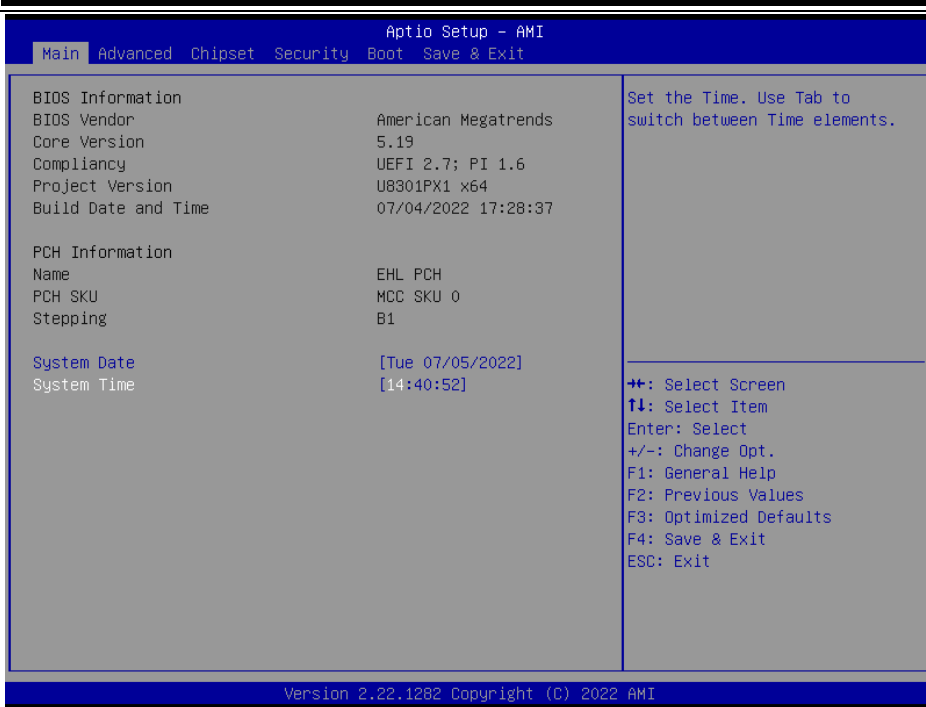

BIOS Setup Menu Initialization Screen

You may move the cursor by <↑> and <↓> keys to highlight the individual menu items. As you highlight each item, a brief description of the highlighted selection will appear on the right side of the screen.


The language of the BIOS setup menu interface and help messages are shown in US English. You may use <↑> or <↓> key to select among the items and press <Enter> to confirm and enter the sub-menu. The following table provides the list of the navigation keys that you can use while operating the BIOS setup menu.

BIOS Setup Navigation Key	Description
<←> and <→>	Select a different menu screen (move the cursor from the selected menu to the left or right).
<↑> and <↓>	Select a different item (move the cursor from the selected item upwards or downwards)
<Enter>	Execute the command or select the sub-menu.
<F2>	Load the previous configuration values.
<F3>	Load the default configuration values.
<F4>	Save the current values and exit the BIOS setup menu.
<Esc>	Close the sub-menu. Trigger the confirmation to exit BIOS setup menu.

5.3 Main

Menu Path *Main*

The **Main** menu allows you to view the BIOS Information and change the system date and time. Use tab to switch between date elements. Use <↑> or <↓> arrow keys to highlight the item and enter the value you want in each item. This screen also displays the BIOS version (project) and BIOS Build Date and Time.

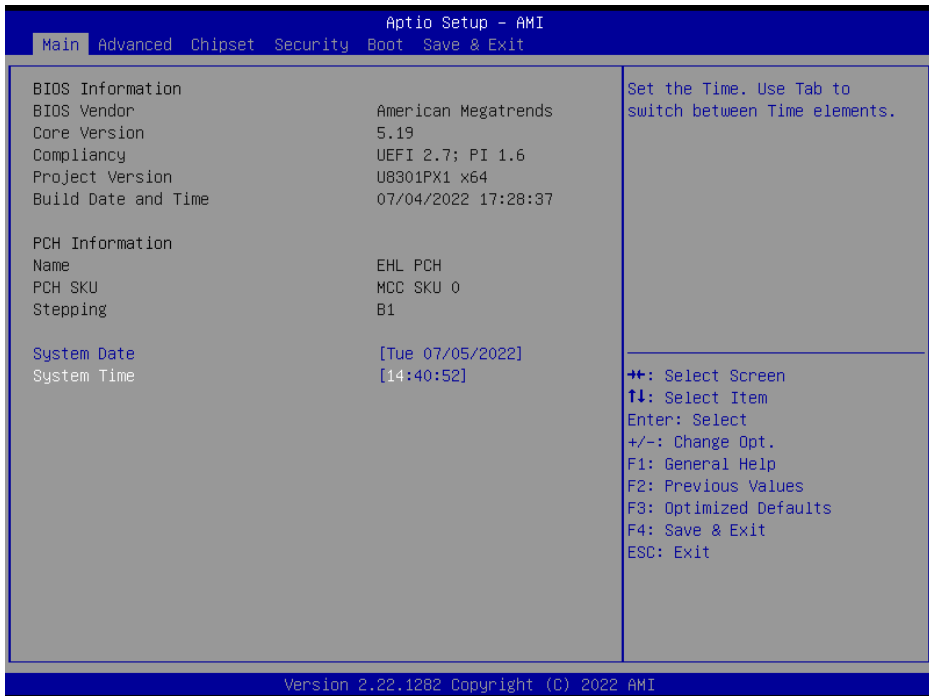

Main Screen


BIOS Setting	Options	Description/Purpose
BIOS Vendor	No changeable options	Displays the name of the BIOS vendor.
Core Version	No changeable options	Displays the current BIOS core version.
Compliancy	No changeable options	Displays the current UEFI version.
Project Version	No changeable options	Displays the version of the BIOS currently installed on the platform.
Build Date and Time	No changeable options	Displays the date that the current BIOS version is built.
Name	No changeable options	Displays the name of the PCH.
PCH SKU	No changeable options	Displays the SKU for the PCH.
Stepping	No changeable options	Displays the stepping of the PCH.

BIOS Setting	Options	Description/Purpose
System Date	Month, day, year	Sets the system date. The format is [Day Month/ Date/ Year]. Users can directly enter values or use <+> or <-> arrow keys to increase/decrease it. The "Day" is automatically changed.
System Time	Hour, minute, second	Sets the system time. The format is [Hour: Minute: Second]. Users can directly enter values or use <+> or <-> arrow keys to increase/decrease it.

5.4 Advanced

Menu Path *Advanced*

This menu provides advanced the sub-menu items such as CPU Configuration, PCH-FW Configuration, ACPI Settings, F81967 Super IO Configuration, Hardware Monitor, F81967 Watchdog, S5 RTC Wake Settings, PTN3460 EDID Configuration, USB Configuration, Network Stack Configuration and NVMe Configuration.

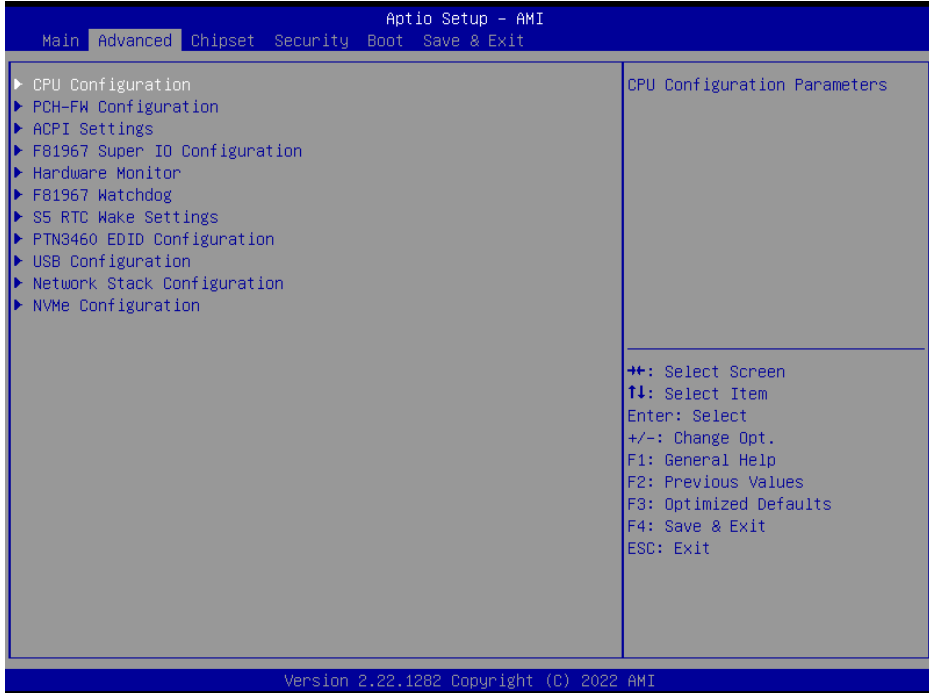

Advanced Menu Screen

BIOS Setting	Options	Description/Purpose
CPU Configuration	Sub-Menu	CPU Configuration Parameters.
PCH-FW Configuration	Sub-Menu	Management Engine Technology Parameters.
ACPI Settings	Sub-Menu	System ACPI Parameters.
F81967 Super IO Configuration	Sub-Menu	System Super I/O Chip Parameters.
Hardware Monitor	Sub-Menu	Monitors hardware status.
F81967 Watchdog	Sub-Menu	Super I/O Watchdog Parameters.
S5 RTC Wake Settings	Sub-Menu	S5 RTC Wake Parameters.
PTN3460 EDID Configuration	Sub-Menu	PTN3460 EDID Settings.
USB Configuration	Sub-Menu	USB Configuration Parameters.
Network Stack Configuration	Sub-Menu	Network Stack Settings.
NVMe Configuration	Sub-Menu	NVMe Device Options Settings.

5.4.1 Advanced – CPU Configuration

Menu Path *Advanced > CPU Configuration*


CPU Configuration Screen

BIOS Setting	Options	Description/Purpose
Type	No changeable options	Displays the CPU Type.
ID	No changeable options	Displays the CPU ID.
Speed	No changeable options	Displays the CPU Speed.
L1 Data Cache	No changeable options	L1 Data Cache Size.
L1 Instruction Cache	No changeable options	L1 Instruction Cache Size.
L2 Cache	No changeable options	L2 Cache Size.
L3 Cache	No changeable options	L3 Cache Size.
L4 Cache	No changeable options	L4 Cache Size.
VMX	No changeable options	CPU VMX hardware support for virtual machines.
SMX (Secure Mode Extensions) / TXT	No changeable options	Secure Mode extensions support.
Intel (VMX) Virtualization Technology	- Disabled - Enabled (default)	When enabled, VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

5.4.2 Advanced – PCH-FW Configuration

Menu Path *Advanced > PCH-FW Configuration*

The **PCH-FW** allows users to view the information about ME (Management Engine) firmware information, such as ME firmware version, firmware mode and firmware SKU.

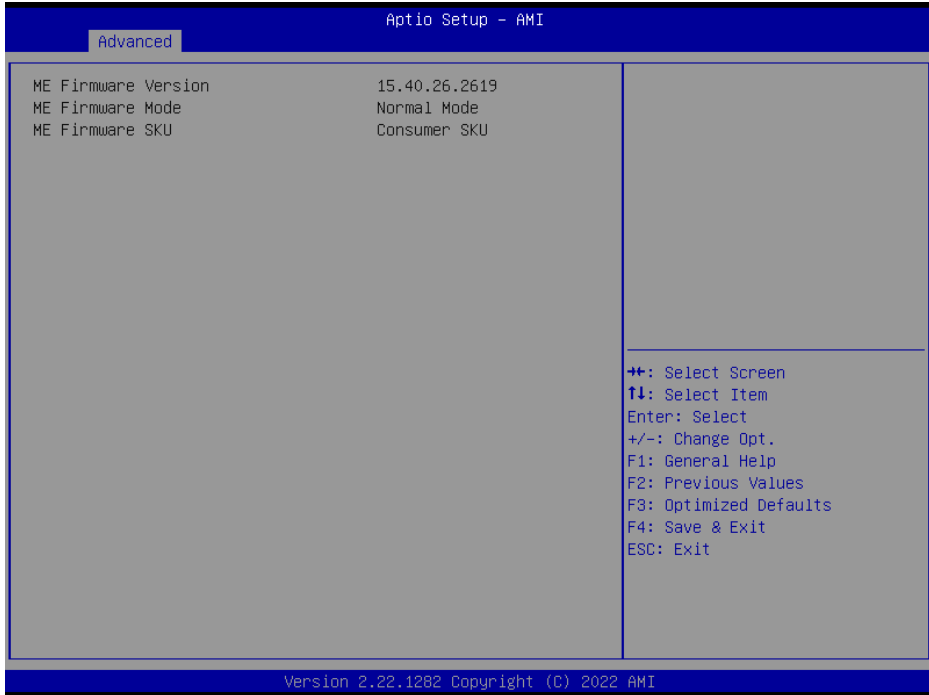


PCH-FW Configuration Screen

BIOS Setting	Options	Description/Purpose
ME Firmware Version	No changeable options	Displays the ME Firmware Version.
ME Firmware Mode	No changeable options	Displays the ME Firmware Mode.
ME Firmware SKU	No changeable options	Displays the ME Firmware SKU.

5.4.3 Advanced – ACPI Settings

Menu Path *Advanced > ACPI Settings*

The **ACPI Settings** allows users to configure relevant ACPI (Advanced Configuration and Power Management Interface) settings, such as enable/disable Hibernation and configure ACPI Sleep State.

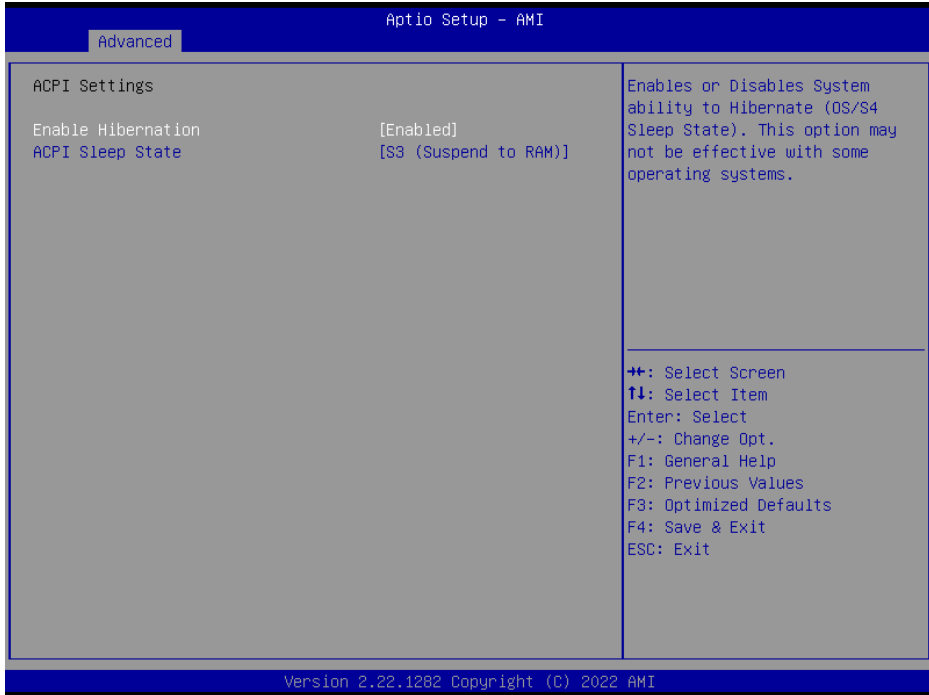

ACPI Settings Screen

BIOS Setting	Options	Description/Purpose
Enable Hibernation	- Disabled - Enabled (Default)	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
ACPI Sleep State	- Suspend Disabled - S3 (Suspend to RAM) (Default)	Selects the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.

5.4.4 Advanced – F81967 Super IO Configuration

Menu Path *Advanced > F81967 Super IO Configuration*




F81967 Super IO Configuration Screen

BIOS Setting	Options	Description/Purpose
Serial Port 1 Configuration	Sub-Menu	Sets Parameters of Serial Port 1 (COM1).
Serial Port 2 Configuration	Sub-Menu	Sets Parameters of Serial Port 2 (COM2).

F81967 Super IO Configuration – Serial Port 1 Configuration

Menu Path *Advanced > F81967 Super IO Configuration > Serial Port 1 Configuration*

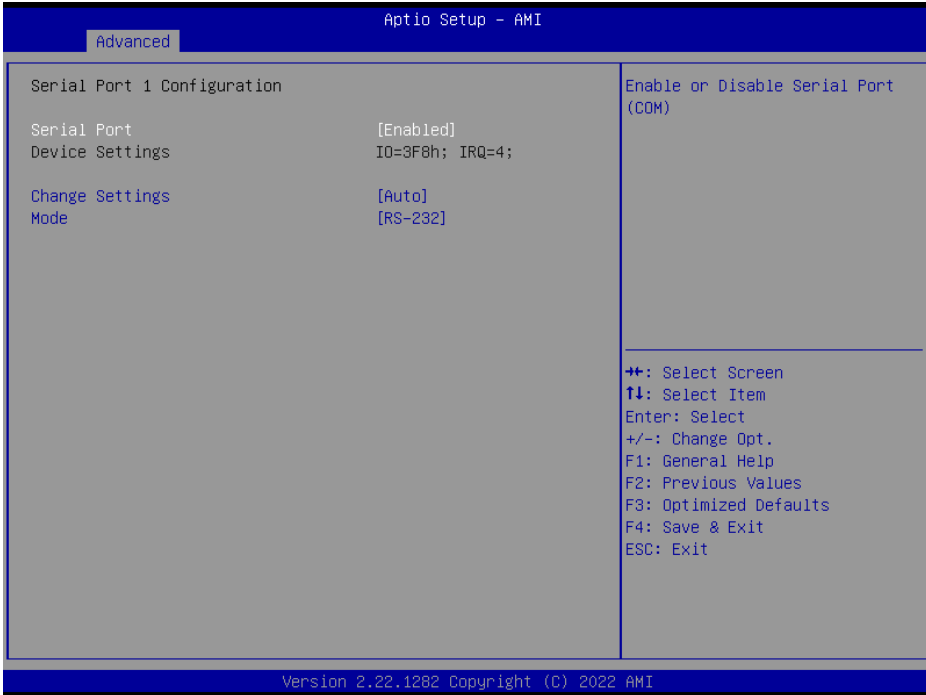


Serial Port 1 Configuration Screen

BIOS Setting	Options	Description/Purpose
Serial Port	- Disabled - Enabled (Default)	Enables or Disables Serial Port 1.
Device Settings	No changeable options	Displays current settings of Serial Port 1.
Change Settings	- Auto (Default) - IO=3F8h; IRQ=4; - IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; - IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12; - IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; - IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	Selects IRQ and I/O resource for Serial Port 1.
Mode	- RS-232 (Default) - RS-422 - RS-485	Selects COM mode.

F81967 Super IO Configuration – Serial Port 2 Configuration

Menu Path *Advanced > F81967 Super IO Configuration > Serial Port 2 Configuration*

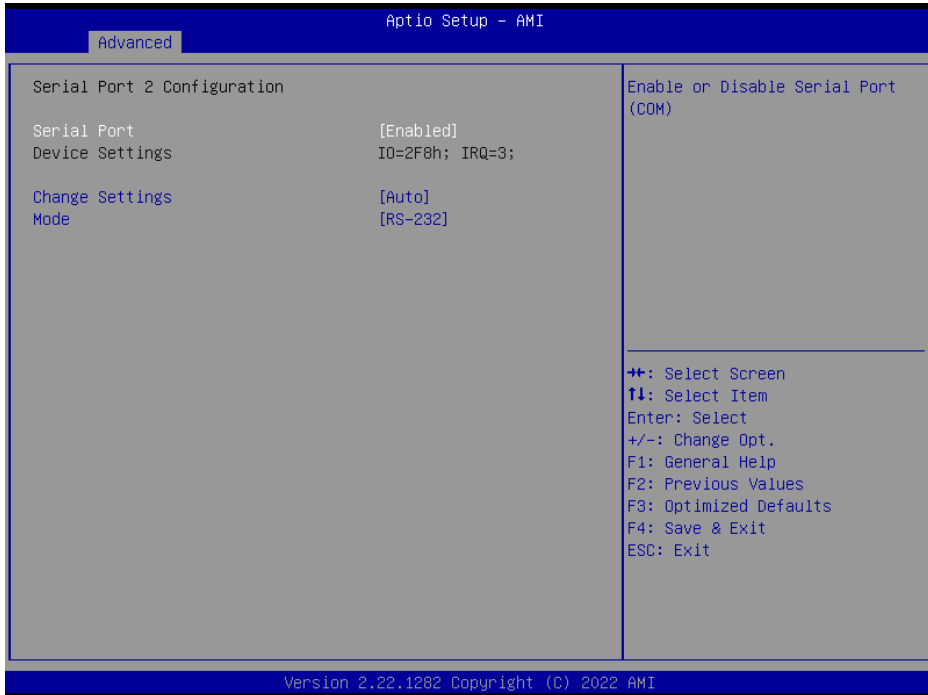


Serial Port 2 Configuration Screen

BIOS Setting	Options	Description/Purpose
Serial Port	- Disabled - Enabled (Default)	Enables or Disables Serial Port 2.
Device Settings	No changeable options	Displays current settings of Serial Port 2.
Change Settings	- Auto (Default) - IO=2F8h; IRQ=3; - IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; - IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12; - IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; - IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	Selects IRQ and I/O resource for the Serial Port 2.
Mode	- RS-232 (Default) - RS-422 - RS-485	Selects COM mode.

5.4.5 Advanced – Hardware Monitor

Menu Path *Advanced > Hardware Monitor*

The **Hardware Monitor** allows users to monitor the health and status of the system such as CPU temperature, system temperature, system and CPU fan speed and voltage levels in supply.

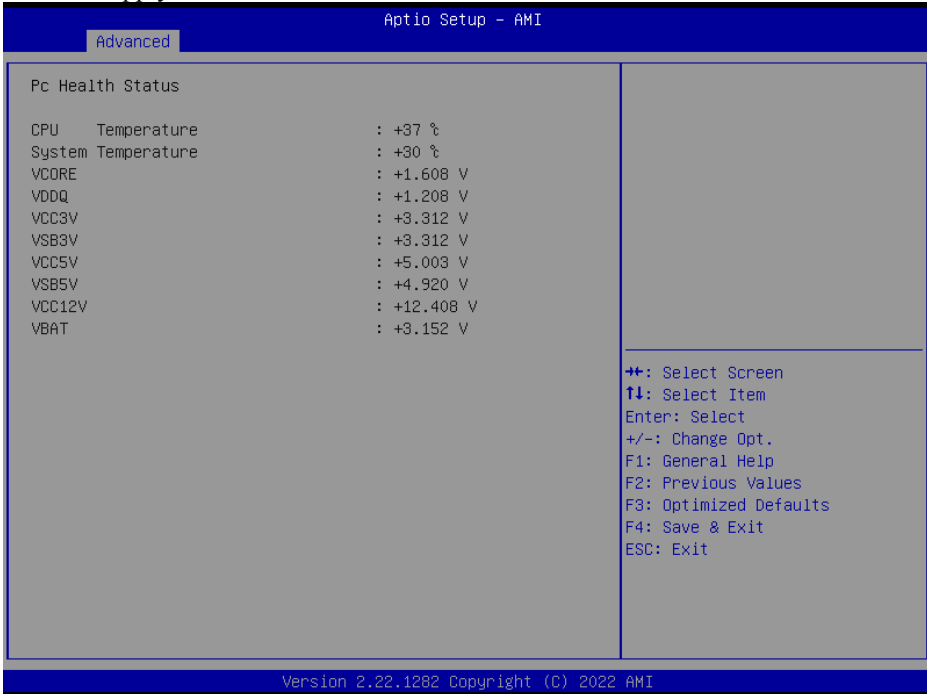


Hardware Monitor Screen

BIOS Setting	Options	Description/Purpose
CPU Temperature	No changeable options	Displays processor's temperature.
System Temperature	No changeable options	Displays system's temperature.
VCORE	No changeable options	Displays the voltage level of VCORE in supply.
VDDQ	No changeable options	Displays the voltage level of VDDQ in supply.
VCC3V	No changeable options	Displays the voltage level of VCC3V in supply.
VSB3V	No changeable options	Displays the voltage level of VSB3V in supply.

BIOS Setting	Options	Description/Purpose
VCC5V	No changeable options	Displays the voltage level of VCC5V in supply.
VSB5V	No changeable options	Displays the voltage level of VSB5V in supply.
VCC12V	No changeable options	Displays the voltage level of VCC12V in supply.
VBAT	No changeable options	Displays the voltage level of VBAT in supply.

5.4.6 Advanced – F81967 Watchdog

Menu Path *Advanced > F81967 Watchdog*

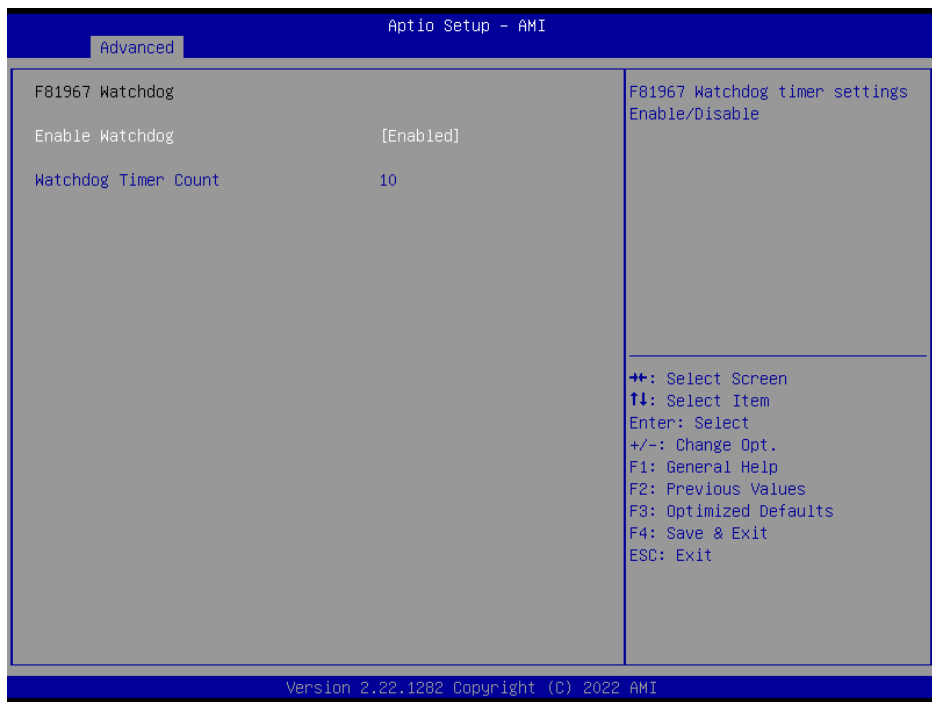


F81967 Watchdog Screen

BIOS Setting	Options	Description/Purpose
Enable Watchdog	- Enabled - Disabled (Default)	Super I/O Watchdog timer settings enabled/disabled.
Watchdog Timer Count	Numeric (from 10 to 255)	The number of count for Timer.

5.4.7 Advanced – S5 RTC Wake Settings

Menu Path *Advanced > S5 RTC Wake Settings*

The **S5 RTC Wake Settings** enables/disables the system to wake up at a preset time of a day from S5 State using RTC alarm.

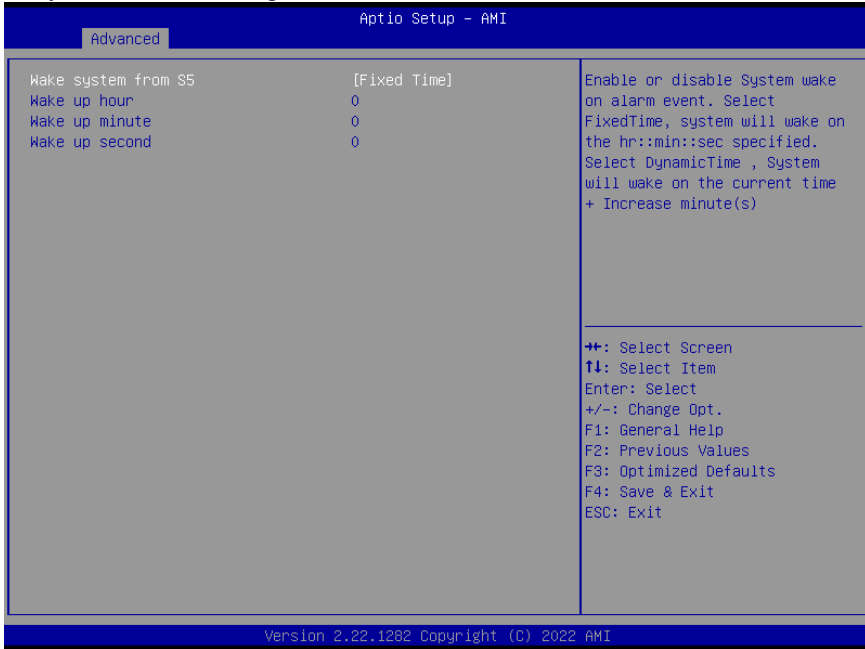

S5 RTC Wake Settings Screen

BIOS Setting	Options	Description/Purpose
Wake system from S5	- Disabled (Default) - Fixed Time - Dynamic Time	Enables or disables System to wake on alarm events. <ul style="list-style-type: none"> • Fixed Time: The system will wake on the time (hr::min::sec) specified. • Dynamic Time: The system will wake on the current time + Increase minute(s).
Wake up hour	Numeric (from 0 to 23)	Enters 0-23 to set the wake-up hour, e.g.: enters 3 for 3 a.m. and 15 for 3 pm
Wake up minute	Numeric (from 0 to 59)	Enters 0-59 to set the wake-up minute.
Wake up second	Numeric (from 0 to 59)	Enters 0-59 to set the wake-up second.
Wake up minute increase	Numeric (from 1 to 5)	Enters 1-5 to set the increased minute(s) for dynamic wake-up time.

5.4.8 Advanced – PTN3460 EDID Configuration

Menu Path *Advanced > PTN3460 EDID Configuration*



PTN3460 EDID Configuration Screen

BIOS Setting	Options	Description/Purpose
EDID Selection	<ul style="list-style-type: none"> - 0-ST084SVLD02 (8.4" 800x600) (Default) - 1-ST104XALDN10 (10.4" 1024x768) - 2-G150XNE-L03 (15" 1024x768) - 3-G170ETN01.0 (17" 1280x1024 Dual) - 4-G156XW01.3 (15.6" 1366x768) - 5-G190ETN01.2 (19" 1280x1024 Dual) - 6-G238HAN01.1 (23.8" 1920x1080 Dual) 	PTN3460 stores 7 EDID in configuration table in SRAM, select the EDID for attached LVDS panel.

5.4.9 Advanced – USB Configuration

Menu Path *Advanced > USB Configuration*

The **USB Configuration** allows users to configure advanced USB settings such as USB mass storage driver support.



USB Configuration Screen


BIOS Setting	Options	Description/Purpose
USB Module Version	No changeable options	Displays USB module version.
USB Controllers	No changeable options	Displays number and type of USB controllers (if any).
USB Devices	No changeable options	Displays number and type of connected USB devices (if any).
USB Mass Storage Driver Support	- Disabled - Enabled (Default)	Enables/Disables USB Mass Storage Driver Support.
MASS STORAGE DEVICES: [drive(s)]	- Auto (Default) - Floppy - Forced FDD - Hard Disk - CD-ROM	Auto enumerates devices according to their media format. Optical drives are emulated as 'CD-ROM'. Drives with no media will be emulated according to a drive type.

5.4.10 Advanced – Network Stack Configuration

Menu Path *Advanced > Network Stack Configuration*

The **Network Stack Configuration** allows users to enable/disable UEFI Network Stack, IPv4/IPv6 PXE (Pre-Boot Execution) support and configure PXE boot wait time and detects the media presence.

PXE allows a workstation to boot from a server on a network prior to booting the operating system on the local hard drive. A PXE-enabled workstation connects its NIC to the LAN via a jumper, which keeps the workstation connected to the network even when the power is turned off.

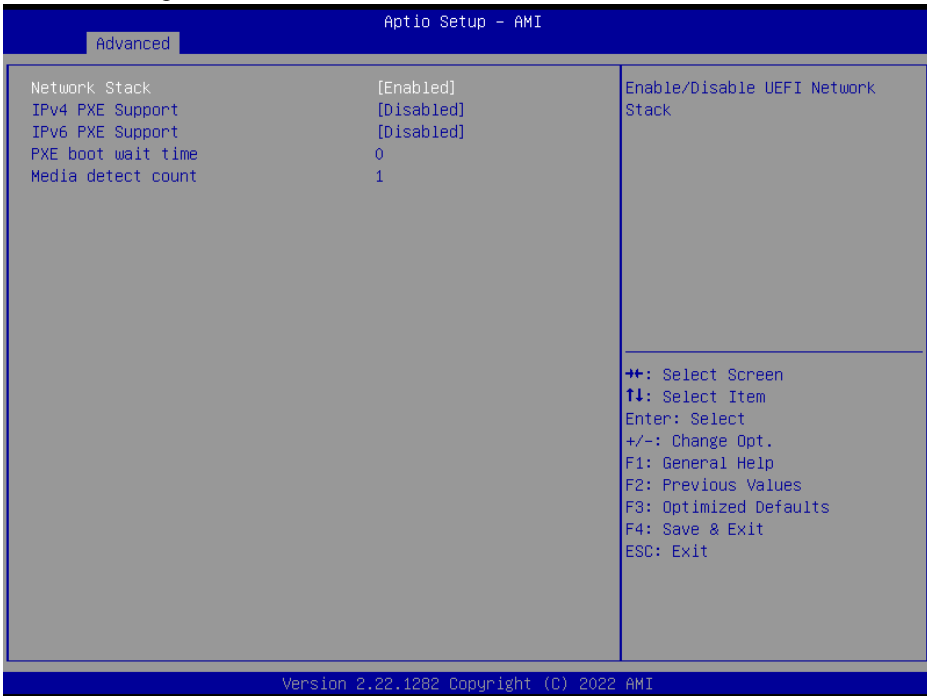


Network Stack Configuration Screen

BIOS Setting	Options	Description/Purpose
Network Stack	- Disabled (Default) - Enabled	Enables / Disables UEFI Network Stack.
Ipv4 PXE Support	- Disabled (Default) - Enabled	Enables / Disables Ipv4 PXE boot support. If disabled, Ipv4 PXE boot support will not be available.

BIOS Setting	Options	Description/Purpose
Ipv6 PXE Support	- Disabled (Default) - Enabled	Enable s/ Disables Ipv6 PXE boot support. If disabled, Ipv6 PXE boot support will not be available.
PXE boot wait time	Numeric (from 0 to 5)	Wait time to press ESC key to abort the PXE boot.
Media detect count	Numeric (from 1 to 50)	Numbers of times presence of media will be checked.

5.4.11 Advanced – NVMe Configuration

Menu Path *Advanced > NVMe Configuration*

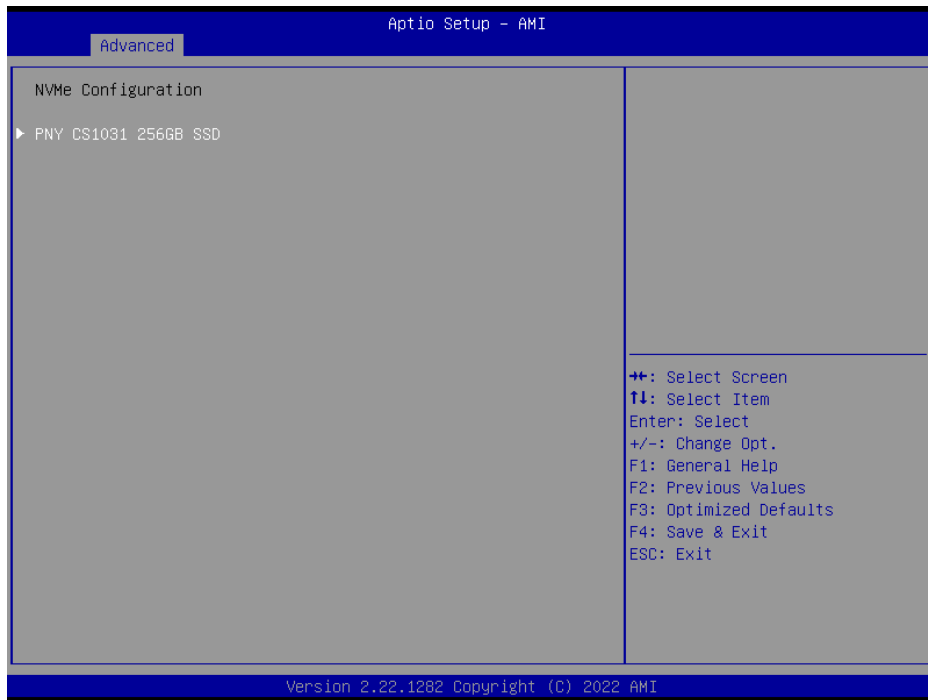

NVMe Configuration Screen

BIOS Setting	Options	Description/Purpose
NVMe Configuration	No changeable options	Displays NVMe device

5.5 Chipset

Menu Path *Chipset*

This menu allows users to configure advanced Chipset settings such as System Agent (SA) and PCH-IO configuration parameters.




Chipset Screen

BIOS Setting	Options	Description/Purpose
System Agent (SA) Configuration	Sub-Menu	System Agent (SA) Parameters.
PCH-IO Configuration	Sub-Menu	Parameters.

5.5.1 Chipset – System Agent (SA) Configuration

Menu Path *Chipset > System Agent (SA) Configuration*

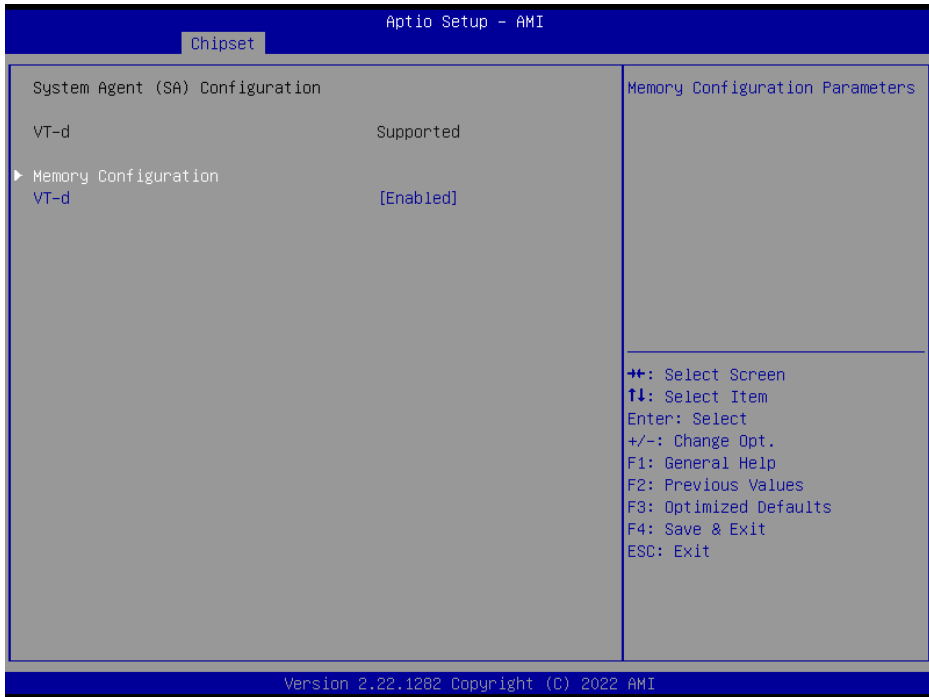


System Agent (SA) Configuration Screen

BIOS Setting	Options	Description/Purpose
Memory Configuration	Sub-Menu	Memory Configuration.
VT-d	- Disabled - Enabled (Default)	Enables or Disables VT-d function.

System Agent (SA) Configuration – Memory Configuration

Menu Path *Chipset > System Agent (SA) Configuration > Memory Configuration*

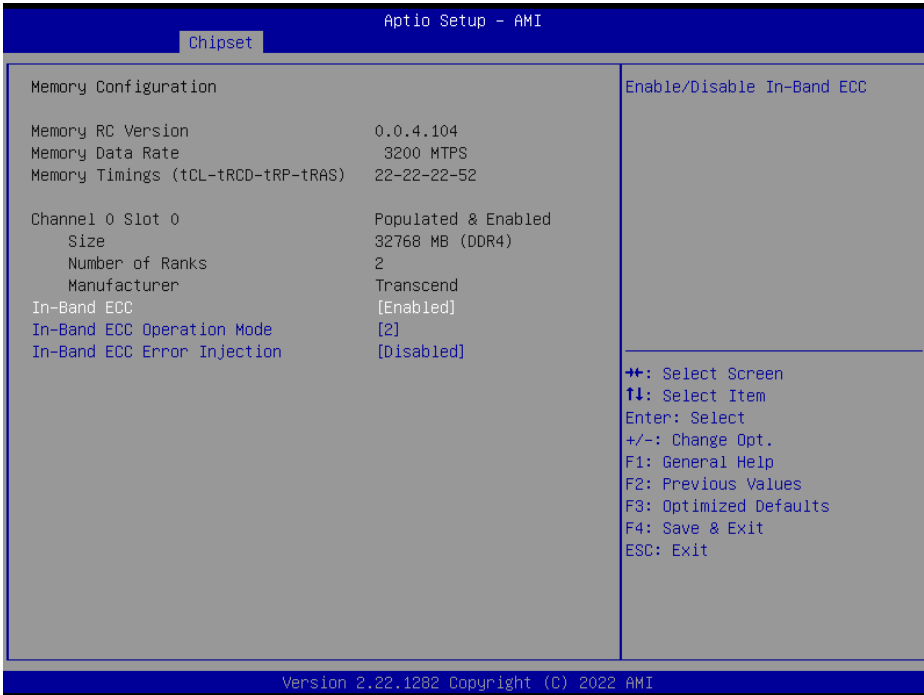

Memory Configuration Screen


BIOS Setting	Options	Description/Purpose
Memory RC Version	No changeable options	Display the Memory RC Version.
Memory Data Rate	No changeable options	Display the Frequency of Memory.
Memory Timings (tCL-tRCD-tRP-tRAS)	No changeable options	Display the Timings of Memory.
Channel 0 Slot 0	No changeable options	Display the Channel Slot Subtitle.
Size	No changeable options	Display the Memory size in the slot.
Number of Ranks	No changeable options	Display the Number of Ranks in the slot.
Manufacturer	No changeable options	Display the DIMM Manufacturer name.
In-Band ECC	- Enabled (Default) - Disabled	Enable/Disable In-Band ECC. (For Embedded/Industrial Processor SKU only)

BIOS Setting	Options	Description/Purpose
In-Band ECC Operation Mode	- 0 - 1 - 2 (Default)	0: Function Mode protects requests based on the address range, 1: Makes all requests non protected and ignore range checks, 2: Makes all requests protected and ignore range checks
In-Band ECC Error Injection	- Enabled - Disabled (Default)	Enable/Disable Error Injection. (For test purpose)

5.5.2 Chipset – PCH-IO Configuration

Menu Path *Chipset > PCH-IO Configuration*

The **PCH-IO Configuration** allows users to configure PCI Express and SATA configuration parameters and determine the power on/off state that the system will go to following a power failure (G3 state), and enable / disable LPC Debug 80 Port.

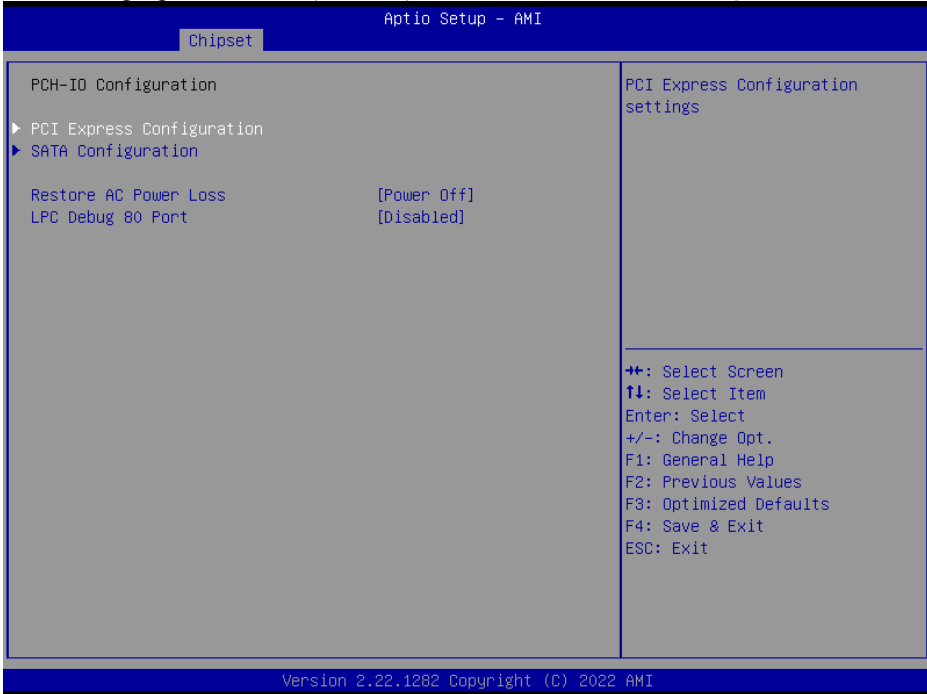


PCH-IO Configuration Screen

BIOS Setting	Options	Description/Purpose
PCI Express Configuration	Sub-Menu	PCI Express Configuration settings.
SATA Configuration	Sub-Menu	SATA Configuration settings.
Restore AC Power Loss	- Power On - Power Off (Default)	Specifies what state to go to when power is re-applied following a power failure (G3 state).
LPC Debug 80 Port	- Disabled (Default) - Enabled	Enables or Disables LPC Debug 80 Port.

PCH-IO Configuration – PCI Express Configuration

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration*

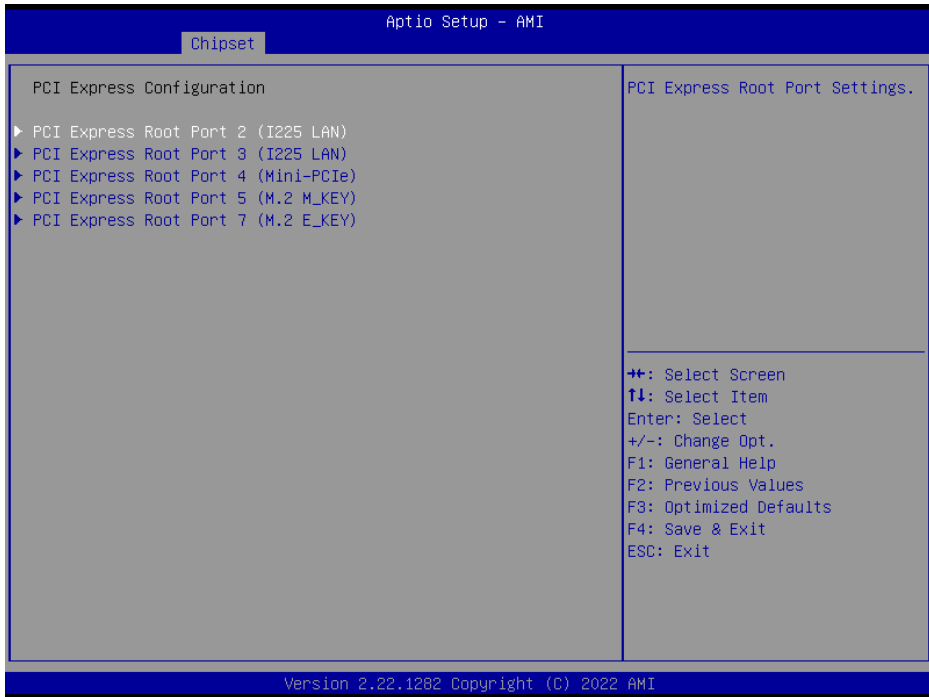


PCI Express Configuration Screen

BIOS Setting	Options	Description/Purpose
PCI Express Root Port 2 (I225 LAN)	Sub-Menu	PCI Express I225 LAN settings.
PCI Express Root Port 3 (I225 LAN)	Sub-Menu	PCI Express I225 LAN settings.
PCI Express Root Port 4 (Mini-PCIe)	Sub-Menu	PCI Express Mini-PCIe settings.
PCI Express Root Port 5 (M.2 M_KEY)	Sub-Menu	PCI Express M.2 M_KEY settings.
PCI Express Root Port 7 (M.2 E_KEY)	Sub-Menu	PCI Express M.2 E_KEY settings.

PCH-IO Configuration – PCI Express Configuration – PCI Express Root Port 2 (I225 LAN)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express Root Port 2 (I225 LAN)*

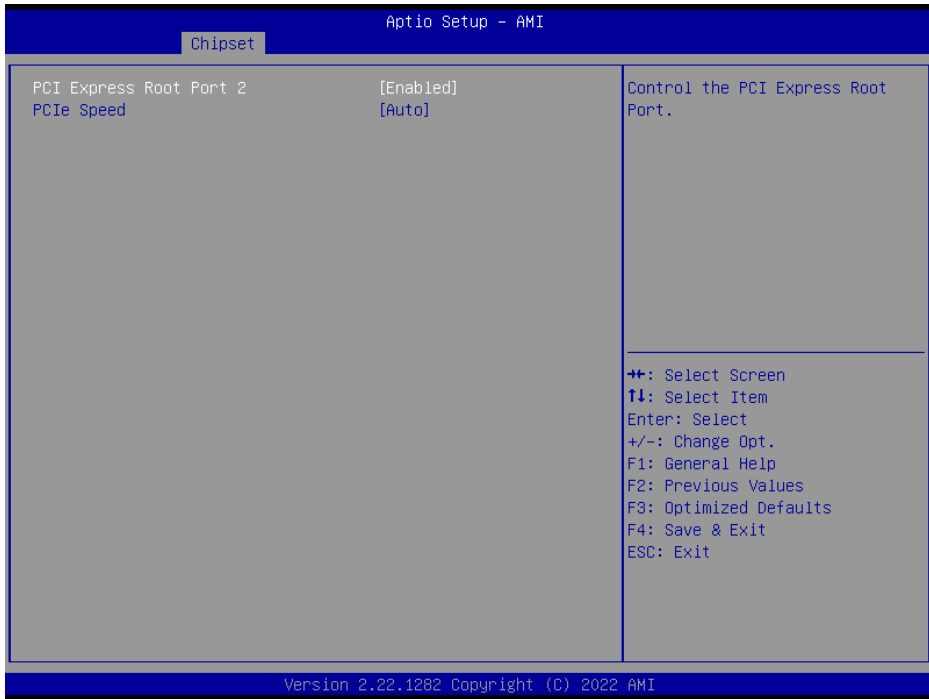


PCI Express Root Port 2 (I225 LAN) Screen

BIOS Setting	Options	Description/Purpose
PCI Express Root Port 2	- Disabled - Enabled (Default)	Enables or Disables the PCI Express Root Port.
PCIe Speed	- Auto (Default) - Gen1 - Gen2 - Gen3	Configures PCIe Speed.

PCH-IO Configuration – PCI Express Configuration – PCI Express Root Port 3 (I225 LAN)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express Root Port 3 (I225 LAN)*

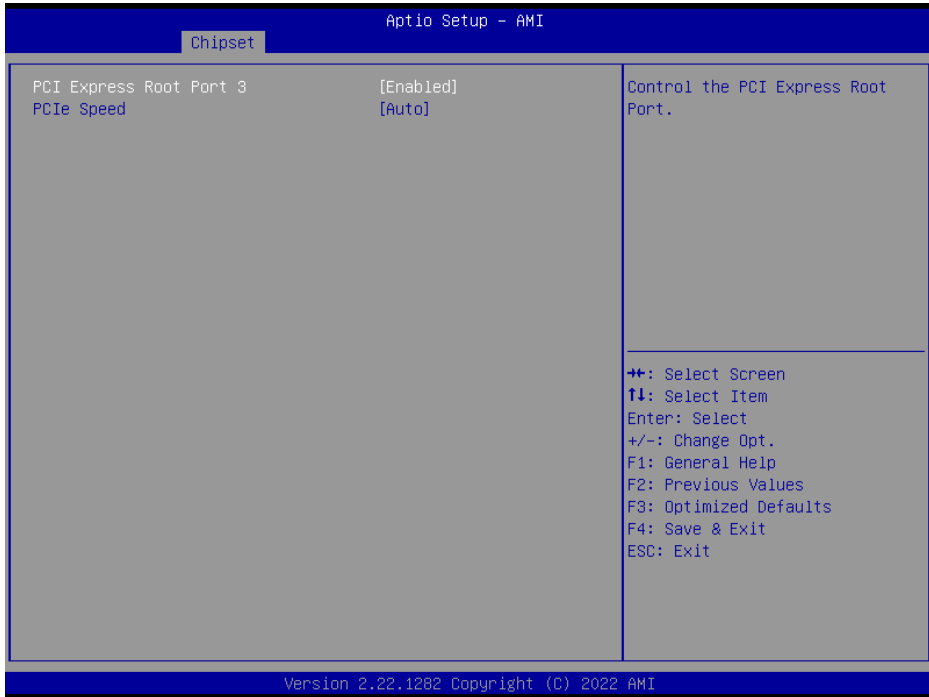


PCI Express Root Port 3 (I225 LAN) Screen

BIOS Setting	Options	Description/Purpose
PCI Express Root Port 3	- Disabled - Enabled (Default)	Enables or Disables the PCI Express Root Port.
PCIe Speed	- Auto (Default) - Gen1 - Gen2 - Gen3	Configures PCIe Speed.

PCH-IO Configuration – PCI Express Configuration – PCI Express Root Port 4 (Mini-PCIe)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express Root Port 4 (Mini-PCIe)*

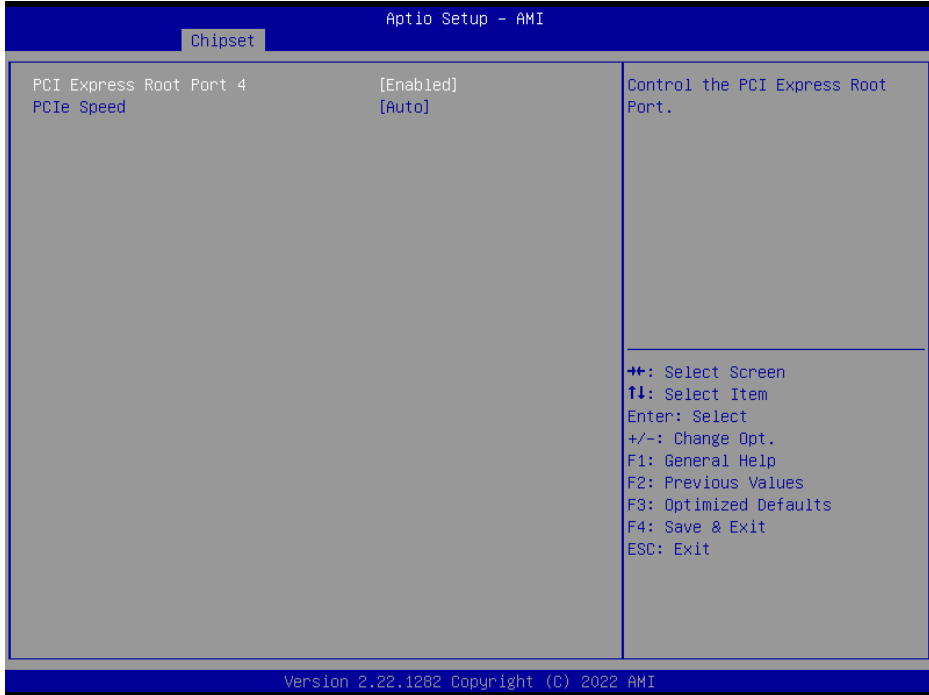


PCI Express Root Port 4 (Mini-PCIe) Screen

BIOS Setting	Options	Description/Purpose
PCI Express Root Port 4	- Disabled - Enabled (Default)	Enables or Disables the PCI Express Root Port.
PCIe Speed	- Auto (Default) - Gen1 - Gen2 - Gen3	Configures PCIe Speed.

PCH-IO Configuration – PCI Express Configuration – PCI Express Root Port 5 (M.2 M_KEY)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express Root Port 5 (M.2 M_KEY)*

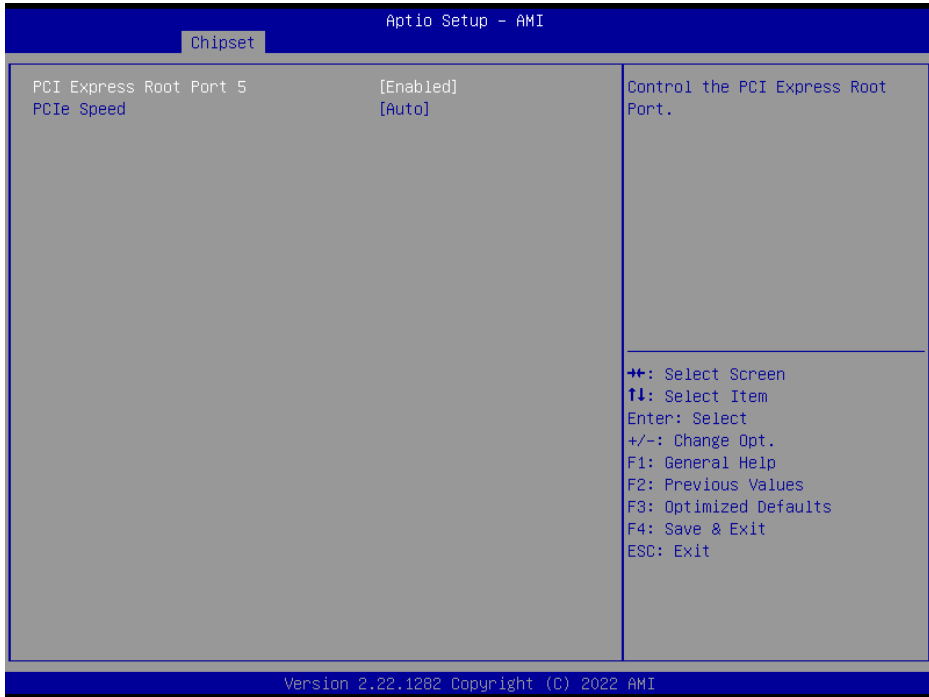


PCI Express Root Port 5 (M.2 M_KEY) Screen

BIOS Setting	Options	Description/Purpose
PCI Express Root Port 5	- Disabled - Enabled (Default)	Enables or Disables the PCI Express Root Port.
PCIe Speed	- Auto (Default) - Gen1 - Gen2 - Gen3	Configures PCIe Speed.

PCH-IO Configuration – PCI Express Configuration – PCI Express Root Port 7 (M.2 E_KEY)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express Root Port 7 (M.2 E_KEY)*

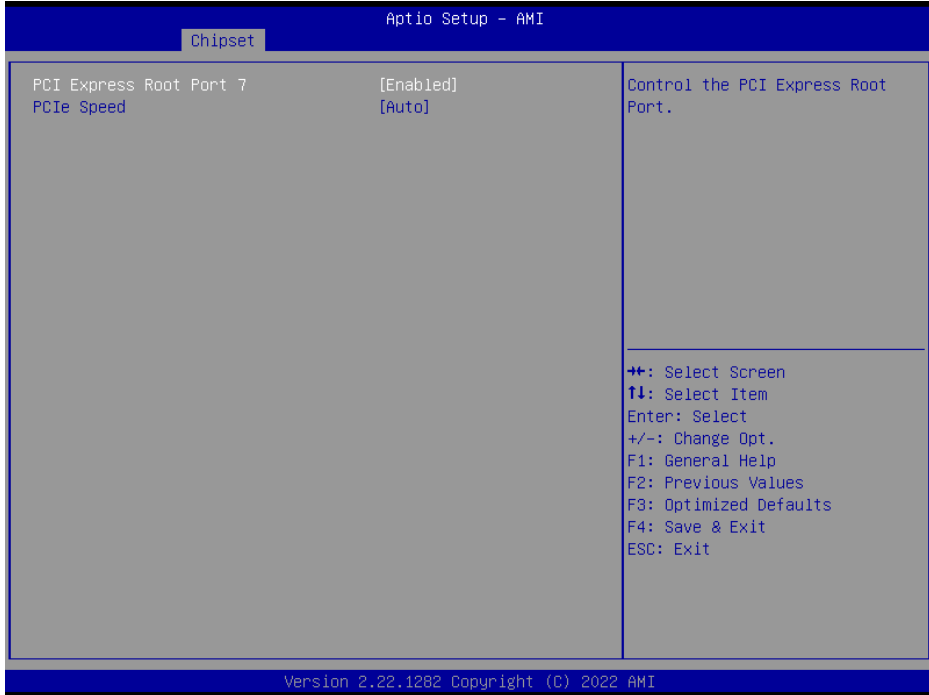


PCI Express Root Port 7 (M.2 E_KEY) Screen

BIOS Setting	Options	Description/Purpose
PCI Express Root Port 7	- Disabled - Enabled (Default)	Enables or Disables the PCI Express Root Port.
PCIe Speed	- Auto (Default) - Gen1 - Gen2 - Gen3	Configures PCIe Speed.

PCH-IO Configuration – SATA Configuration

Menu Path *Chipset > PCH-IO Configuration > SATA Configuration*

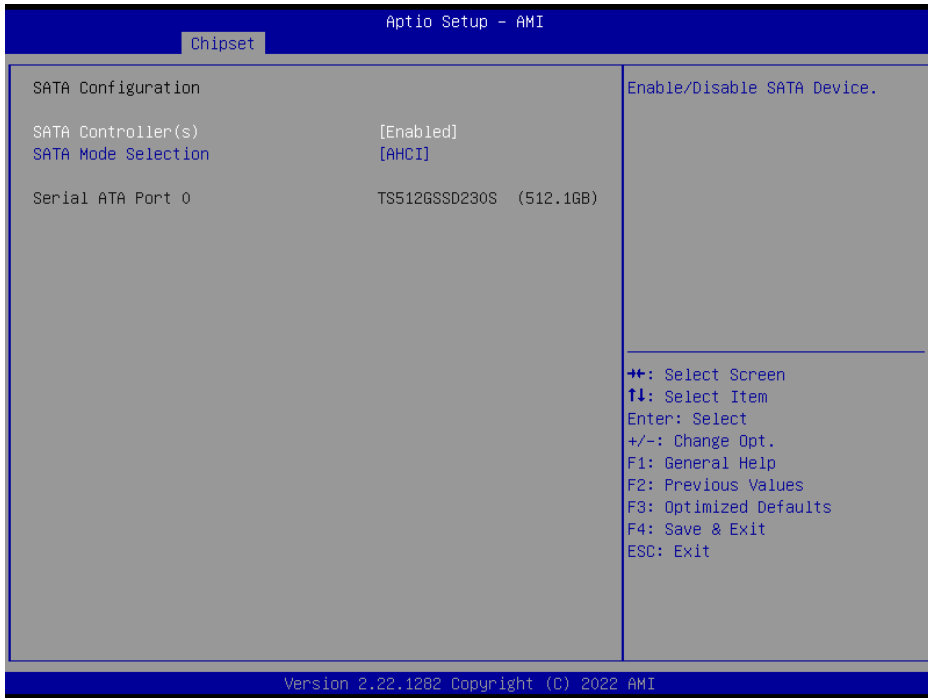

SATA Configuration Screen


BIOS Setting	Options	Description/Purpose
SATA Controller(s)	- Enabled (Default) - Disabled	Enables or Disables SATA Device.
SATA Mode Selection	- AHCI (Default)	Determines how SATA controller(s) operate.
Serial ATA Port 0	No changeable options	Displays the SATA device's name.

5.6 Security

Menu Path *Security*

From the **Security** menu, you are allowed to create, change or clear the administrator password. You will be asked to enter the configured administrator password before you can access the Setup Utility.

By setting an administrator password, you will prevent other users from changing your BIOS settings. You can configure an Administrator password and then configure a user password. An administrator has much more privileges over the settings in the Setup utility than a user. Heed that a user password does not provide access to most of the features in the Setup utility.

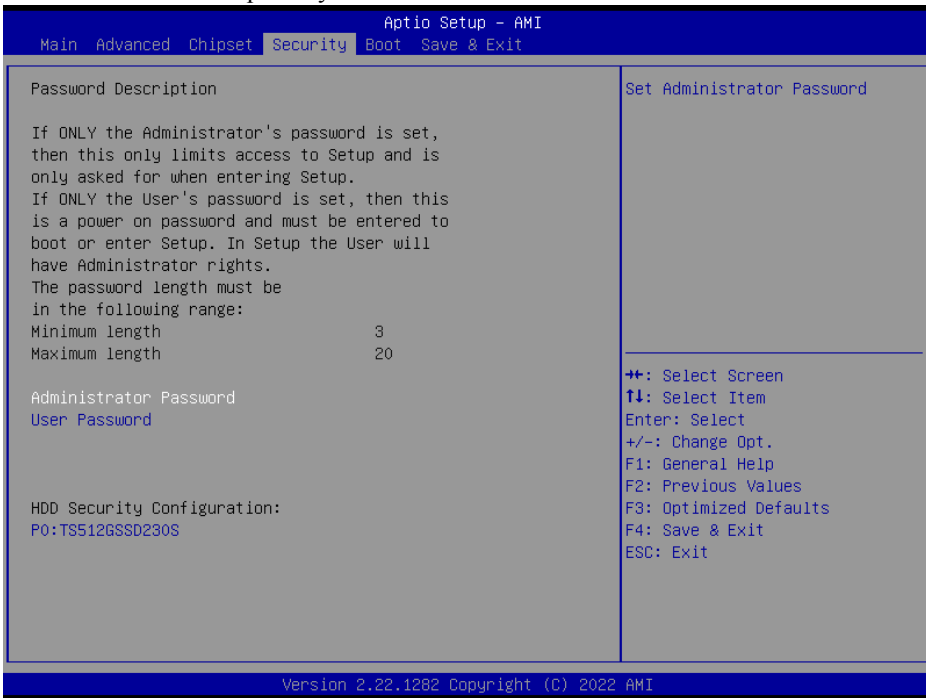

Security Screen

BIOS Setting	Options	Description/Purpose
Administrator Password	Password can be 3-20 alphanumeric characters.	Specifies the administrator password.
User Password	Password can be 3-20 alphanumeric characters.	Specifies the user password.

BIOS Setting	Options	Description/Purpose
HDD Security Configuration	Sub-Menu	Enters sub-menu with option to enabled password protected HDD/SSD (if supported by SATA device).

Create an Administrator or User Password

1. Select the **Administrator Password / User Password** option from the Security menu and press <Enter>, and the password dialog entry box appears.
2. Enter the password you want to create. A password can be 3-20 alphanumeric characters. After you have configured the password, press <Enter> to confirm.
3. Type the new password again and press <Enter>.

Change an Administrator or User Password

1. Select the **Administrator Password / User Password** option from the Security menu and press <Enter>, and the password dialog entry box appears.
2. Select the Administrator Password or User Password that you want to change. A password can be 3-20 alphanumeric characters. After you have changed the password, press <Enter> to confirm.
3. Type the changed password again and press <Enter>.


Remove an Administrator or User Password

1. Select the **Administrator Password / User Password** option from the Security menu and press <Enter>, and the password dialog entry box appears.
2. Select the configured Administrator Password or User Password that you want to delete. Leave the dialog box blank and press <Enter>.
3. Press <Enter> again when the password confirmation box appears.

5.7 Boot

Menu Path *Boot*

This menu provides control items for setting system boot configuration and boot priorities.

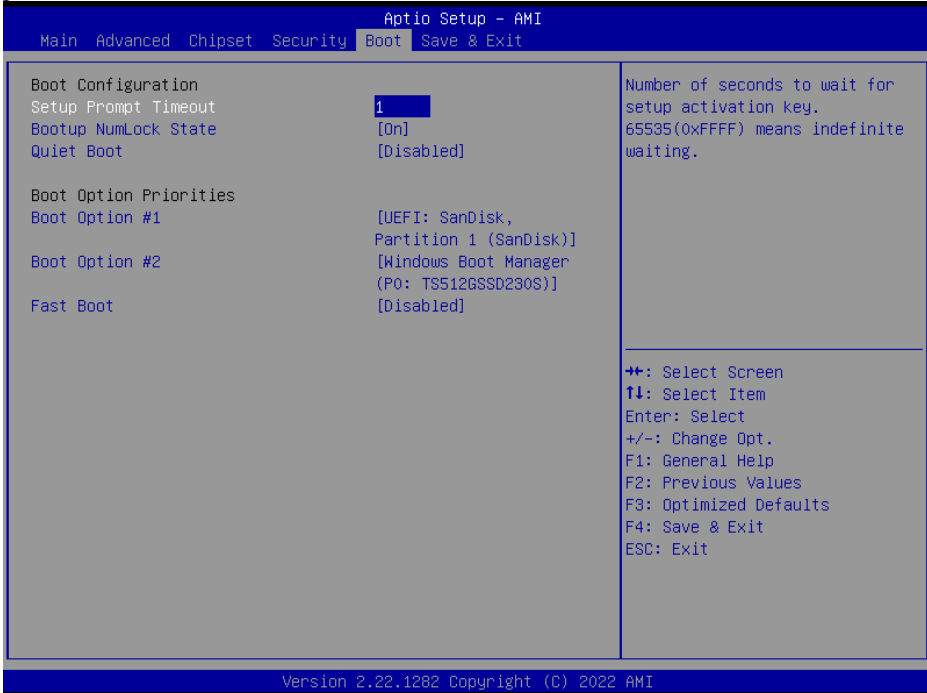

Boot Screen

BIOS Setting	Options	Description/Purpose
Setup Prompt Timeout	Numeric (from 1 to 65535)	Number of seconds to wait for setup activation key.
Bootup NumLock State	- On (Default) - Off	Specifies the power-on state of the NumLock Key.
Quiet Boot	- Disabled (Default) - Enabled	Enable or Disable Quiet Boot Options
Boot Option #1~#n	- [Drive(s)] - Disabled	Sets the system boot order.
Fast Boot	- Disabled (Default) - Enabled	Enables or Disables Fast Boot options.

5.8 Save & Exit

Menu Path *Save & Exit*

The **Save & Exit** allows users to save or discard changed BIOS settings as well as load factory default settings.

Save Changed BIOS Settings


To save and validate the changed BIOS settings, select **Save Changes** from the **Save & Exit** menu, or you can select **Save Changes and Exit** (or press **F4**) to validate the changes and then exit the system. Select **Save Changes and Reset** to validate the changed BIOS settings and then restart the system.

Discard Changed BIOS Settings

To cancel the BIOS settings you have previously configured, select **Discard Changes and Exit** from this menu, or simply press **Esc** to exit the BIOS setup. You can also select **Discard Changes and Reset** to discard any changes you have made and restore the factory BIOS defaults.

Load User Defaults

You may simply press **F3** at any time to load the **Optimized Values** which resets all BIOS settings to the factory defaults.

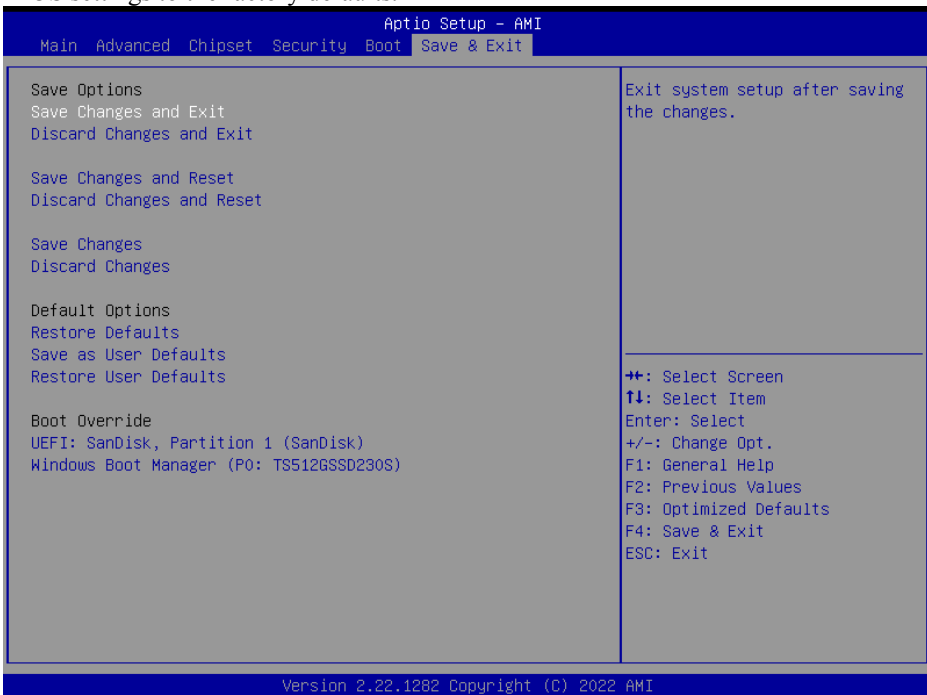

Save & Exit Screen

BIOS Setting	Options	Description/Purpose
Save Changes and Exit	No changeable options	Exits and saves the changes in NVRAM.
Discard Changes and Exit	No changeable options	Exits without saving any changes made in BIOS settings.
Save Changes and Reset	No changeable options	Saves the changes in NVRAM and resets.
Discard Changes and Reset	No changeable options	Resets without saving any changes made in BIOS settings.
Save Changes	No changeable options	Saves Changes done so far to any of the setup options.
Discard Changes	No changeable options	Discards Changes done so far to any of the setup options.
Restore Defaults	No changeable options	Loads the optimized defaults for BIOS settings.
Save as User Defaults	No changeable options	Saves the changes done so far as User Defaults.
Restore User Defaults	No changeable options	Restores the User Defaults to all the setup options.
Boot Override	- [Drive(s)]	Forces to boot from selected [drive(s)].


Appendix A Technical Summary

This appendix will give you a brief introduction of the allocation maps for BE-U830 resources.

The following topics are included:

- BE-U830 Block Diagram
- Interrupt Map
- I/O Map
- Memory Map
- Configuring WatchDog Timer
- Flash BIOS Update

BE-U830 Block Diagram

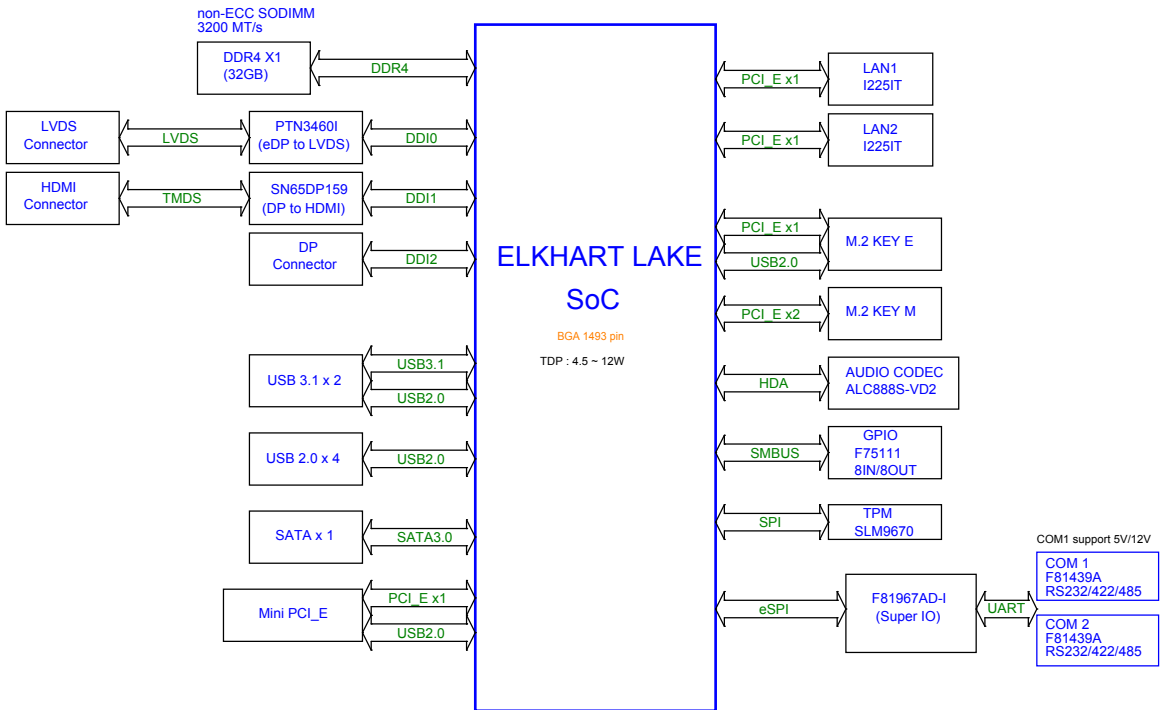

Interrupt Map

IRQ	ASSIGNMENT
IRQ 0	System timer
IRQ 3	Communications Port (COM2)
IRQ 4	Communications Port (COM1)
IRQ 8	System CMOS/real time clock
IRQ 14	Motherboard resources
IRQ 16	High Definition Audio Controller
IRQ 54	Microsoft ACPI-Compliant System
IRQ 55	Microsoft ACPI-Compliant System
IRQ 56	Microsoft ACPI-Compliant System
IRQ 57	Microsoft ACPI-Compliant System
IRQ 58	Microsoft ACPI-Compliant System
IRQ 59	Microsoft ACPI-Compliant System
IRQ 60	Microsoft ACPI-Compliant System
IRQ 61	Microsoft ACPI-Compliant System
IRQ 62	Microsoft ACPI-Compliant System
IRQ 63	Microsoft ACPI-Compliant System
IRQ 64	Microsoft ACPI-Compliant System
IRQ 65	Microsoft ACPI-Compliant System
IRQ 66	Microsoft ACPI-Compliant System
IRQ 67	Microsoft ACPI-Compliant System
IRQ 68	Microsoft ACPI-Compliant System
IRQ 69	Microsoft ACPI-Compliant System
IRQ 70	Microsoft ACPI-Compliant System
IRQ 71	Microsoft ACPI-Compliant System
IRQ 72	Microsoft ACPI-Compliant System
IRQ 73	Microsoft ACPI-Compliant System
IRQ 74	Microsoft ACPI-Compliant System
IRQ 75	Microsoft ACPI-Compliant System
IRQ 76	Microsoft ACPI-Compliant System
IRQ 77	Microsoft ACPI-Compliant System
IRQ 78	Microsoft ACPI-Compliant System
IRQ 79	Microsoft ACPI-Compliant System
IRQ 80	Microsoft ACPI-Compliant System
IRQ 81	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 82	Microsoft ACPI-Compliant System
IRQ 83	Microsoft ACPI-Compliant System
IRQ 84	Microsoft ACPI-Compliant System
IRQ 85	Microsoft ACPI-Compliant System
IRQ 86	Microsoft ACPI-Compliant System
IRQ 87	Microsoft ACPI-Compliant System
IRQ 88	Microsoft ACPI-Compliant System
IRQ 89	Microsoft ACPI-Compliant System
IRQ 90	Microsoft ACPI-Compliant System
IRQ 91	Microsoft ACPI-Compliant System
IRQ 92	Microsoft ACPI-Compliant System
IRQ 93	Microsoft ACPI-Compliant System
IRQ 94	Microsoft ACPI-Compliant System
IRQ 95	Microsoft ACPI-Compliant System
IRQ 96	Microsoft ACPI-Compliant System
IRQ 97	Microsoft ACPI-Compliant System
IRQ 98	Microsoft ACPI-Compliant System
IRQ 99	Microsoft ACPI-Compliant System
IRQ 100	Microsoft ACPI-Compliant System
IRQ 101	Microsoft ACPI-Compliant System
IRQ 102	Microsoft ACPI-Compliant System
IRQ 103	Microsoft ACPI-Compliant System
IRQ 104	Microsoft ACPI-Compliant System
IRQ 105	Microsoft ACPI-Compliant System
IRQ 106	Microsoft ACPI-Compliant System
IRQ 107	Microsoft ACPI-Compliant System
IRQ 108	Microsoft ACPI-Compliant System
IRQ 109	Microsoft ACPI-Compliant System
IRQ 110	Microsoft ACPI-Compliant System
IRQ 111	Microsoft ACPI-Compliant System
IRQ 112	Microsoft ACPI-Compliant System
IRQ 113	Microsoft ACPI-Compliant System
IRQ 114	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 115	Microsoft ACPI-Compliant System
IRQ 116	Microsoft ACPI-Compliant System
IRQ 117	Microsoft ACPI-Compliant System
IRQ 118	Microsoft ACPI-Compliant System
IRQ 119	Microsoft ACPI-Compliant System
IRQ 120	Microsoft ACPI-Compliant System
IRQ 121	Microsoft ACPI-Compliant System
IRQ 122	Microsoft ACPI-Compliant System
IRQ 123	Microsoft ACPI-Compliant System
IRQ 124	Microsoft ACPI-Compliant System
IRQ 125	Microsoft ACPI-Compliant System
IRQ 126	Microsoft ACPI-Compliant System
IRQ 127	Microsoft ACPI-Compliant System
IRQ 128	Microsoft ACPI-Compliant System
IRQ 129	Microsoft ACPI-Compliant System
IRQ 130	Microsoft ACPI-Compliant System
IRQ 131	Microsoft ACPI-Compliant System
IRQ 132	Microsoft ACPI-Compliant System
IRQ 133	Microsoft ACPI-Compliant System
IRQ 134	Microsoft ACPI-Compliant System
IRQ 135	Microsoft ACPI-Compliant System
IRQ 136	Microsoft ACPI-Compliant System
IRQ 137	Microsoft ACPI-Compliant System
IRQ 138	Microsoft ACPI-Compliant System
IRQ 139	Microsoft ACPI-Compliant System
IRQ 140	Microsoft ACPI-Compliant System
IRQ 141	Microsoft ACPI-Compliant System
IRQ 142	Microsoft ACPI-Compliant System
IRQ 143	Microsoft ACPI-Compliant System
IRQ 144	Microsoft ACPI-Compliant System
IRQ 145	Microsoft ACPI-Compliant System
IRQ 146	Microsoft ACPI-Compliant System
IRQ 147	Microsoft ACPI-Compliant System
IRQ 148	Microsoft ACPI-Compliant System
IRQ 149	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 150	Microsoft ACPI-Compliant System
IRQ 151	Microsoft ACPI-Compliant System
IRQ 152	Microsoft ACPI-Compliant System
IRQ 153	Microsoft ACPI-Compliant System
IRQ 154	Microsoft ACPI-Compliant System
IRQ 155	Microsoft ACPI-Compliant System
IRQ 156	Microsoft ACPI-Compliant System
IRQ 157	Microsoft ACPI-Compliant System
IRQ 158	Microsoft ACPI-Compliant System
IRQ 159	Microsoft ACPI-Compliant System
IRQ 160	Microsoft ACPI-Compliant System
IRQ 161	Microsoft ACPI-Compliant System
IRQ 162	Microsoft ACPI-Compliant System
IRQ 163	Microsoft ACPI-Compliant System
IRQ 164	Microsoft ACPI-Compliant System
IRQ 165	Microsoft ACPI-Compliant System
IRQ 166	Microsoft ACPI-Compliant System
IRQ 167	Microsoft ACPI-Compliant System
IRQ 168	Microsoft ACPI-Compliant System
IRQ 169	Microsoft ACPI-Compliant System
IRQ 170	Microsoft ACPI-Compliant System
IRQ 171	Microsoft ACPI-Compliant System
IRQ 172	Microsoft ACPI-Compliant System
IRQ 173	Microsoft ACPI-Compliant System
IRQ 174	Microsoft ACPI-Compliant System
IRQ 175	Microsoft ACPI-Compliant System
IRQ 176	Microsoft ACPI-Compliant System
IRQ 177	Microsoft ACPI-Compliant System
IRQ 178	Microsoft ACPI-Compliant System
IRQ 179	Microsoft ACPI-Compliant System
IRQ 180	Microsoft ACPI-Compliant System
IRQ 181	Microsoft ACPI-Compliant System
IRQ 182	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 183	Microsoft ACPI-Compliant System
IRQ 184	Microsoft ACPI-Compliant System
IRQ 185	Microsoft ACPI-Compliant System
IRQ 186	Microsoft ACPI-Compliant System
IRQ 187	Microsoft ACPI-Compliant System
IRQ 188	Microsoft ACPI-Compliant System
IRQ 189	Microsoft ACPI-Compliant System
IRQ 190	Microsoft ACPI-Compliant System
IRQ 191	Microsoft ACPI-Compliant System
IRQ 192	Microsoft ACPI-Compliant System
IRQ 193	Microsoft ACPI-Compliant System
IRQ 194	Microsoft ACPI-Compliant System
IRQ 195	Microsoft ACPI-Compliant System
IRQ 196	Microsoft ACPI-Compliant System
IRQ 197	Microsoft ACPI-Compliant System
IRQ 198	Microsoft ACPI-Compliant System
IRQ 199	Microsoft ACPI-Compliant System
IRQ 200	Microsoft ACPI-Compliant System
IRQ 201	Microsoft ACPI-Compliant System
IRQ 202	Microsoft ACPI-Compliant System
IRQ 203	Microsoft ACPI-Compliant System
IRQ 204	Microsoft ACPI-Compliant System
IRQ 256	Microsoft ACPI-Compliant System
IRQ 257	Microsoft ACPI-Compliant System
IRQ 258	Microsoft ACPI-Compliant System
IRQ 259	Microsoft ACPI-Compliant System
IRQ 260	Microsoft ACPI-Compliant System
IRQ 261	Microsoft ACPI-Compliant System
IRQ 262	Microsoft ACPI-Compliant System
IRQ 263	Microsoft ACPI-Compliant System
IRQ 264	Microsoft ACPI-Compliant System
IRQ 265	Microsoft ACPI-Compliant System
IRQ 266	Microsoft ACPI-Compliant System
IRQ 267	Microsoft ACPI-Compliant System
IRQ 268	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 269	Microsoft ACPI-Compliant System
IRQ 270	Microsoft ACPI-Compliant System
IRQ 271	Microsoft ACPI-Compliant System
IRQ 272	Microsoft ACPI-Compliant System
IRQ 273	Microsoft ACPI-Compliant System
IRQ 274	Microsoft ACPI-Compliant System
IRQ 275	Microsoft ACPI-Compliant System
IRQ 276	Microsoft ACPI-Compliant System
IRQ 277	Microsoft ACPI-Compliant System
IRQ 278	Microsoft ACPI-Compliant System
IRQ 279	Microsoft ACPI-Compliant System
IRQ 280	Microsoft ACPI-Compliant System
IRQ 281	Microsoft ACPI-Compliant System
IRQ 282	Microsoft ACPI-Compliant System
IRQ 283	Microsoft ACPI-Compliant System
IRQ 284	Microsoft ACPI-Compliant System
IRQ 285	Microsoft ACPI-Compliant System
IRQ 286	Microsoft ACPI-Compliant System
IRQ 287	Microsoft ACPI-Compliant System
IRQ 288	Microsoft ACPI-Compliant System
IRQ 289	Microsoft ACPI-Compliant System
IRQ 290	Microsoft ACPI-Compliant System
IRQ 291	Microsoft ACPI-Compliant System
IRQ 292	Microsoft ACPI-Compliant System
IRQ 293	Microsoft ACPI-Compliant System
IRQ 294	Microsoft ACPI-Compliant System
IRQ 295	Microsoft ACPI-Compliant System
IRQ 296	Microsoft ACPI-Compliant System
IRQ 297	Microsoft ACPI-Compliant System
IRQ 298	Microsoft ACPI-Compliant System
IRQ 299	Microsoft ACPI-Compliant System
IRQ 300	Microsoft ACPI-Compliant System
IRQ 301	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 302	Microsoft ACPI-Compliant System
IRQ 303	Microsoft ACPI-Compliant System
IRQ 304	Microsoft ACPI-Compliant System
IRQ 305	Microsoft ACPI-Compliant System
IRQ 306	Microsoft ACPI-Compliant System
IRQ 307	Microsoft ACPI-Compliant System
IRQ 308	Microsoft ACPI-Compliant System
IRQ 309	Microsoft ACPI-Compliant System
IRQ 310	Microsoft ACPI-Compliant System
IRQ 311	Microsoft ACPI-Compliant System
IRQ 312	Microsoft ACPI-Compliant System
IRQ 313	Microsoft ACPI-Compliant System
IRQ 314	Microsoft ACPI-Compliant System
IRQ 315	Microsoft ACPI-Compliant System
IRQ 316	Microsoft ACPI-Compliant System
IRQ 317	Microsoft ACPI-Compliant System
IRQ 318	Microsoft ACPI-Compliant System
IRQ 319	Microsoft ACPI-Compliant System
IRQ 320	Microsoft ACPI-Compliant System
IRQ 321	Microsoft ACPI-Compliant System
IRQ 322	Microsoft ACPI-Compliant System
IRQ 323	Microsoft ACPI-Compliant System
IRQ 324	Microsoft ACPI-Compliant System
IRQ 325	Microsoft ACPI-Compliant System
IRQ 326	Microsoft ACPI-Compliant System
IRQ 327	Microsoft ACPI-Compliant System
IRQ 328	Microsoft ACPI-Compliant System
IRQ 329	Microsoft ACPI-Compliant System
IRQ 330	Microsoft ACPI-Compliant System
IRQ 331	Microsoft ACPI-Compliant System
IRQ 332	Microsoft ACPI-Compliant System
IRQ 333	Microsoft ACPI-Compliant System
IRQ 334	Microsoft ACPI-Compliant System
IRQ 335	Microsoft ACPI-Compliant System
IRQ 336	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 337	Microsoft ACPI-Compliant System
IRQ 338	Microsoft ACPI-Compliant System
IRQ 339	Microsoft ACPI-Compliant System
IRQ 340	Microsoft ACPI-Compliant System
IRQ 341	Microsoft ACPI-Compliant System
IRQ 342	Microsoft ACPI-Compliant System
IRQ 343	Microsoft ACPI-Compliant System
IRQ 344	Microsoft ACPI-Compliant System
IRQ 345	Microsoft ACPI-Compliant System
IRQ 346	Microsoft ACPI-Compliant System
IRQ 347	Microsoft ACPI-Compliant System
IRQ 348	Microsoft ACPI-Compliant System
IRQ 349	Microsoft ACPI-Compliant System
IRQ 350	Microsoft ACPI-Compliant System
IRQ 351	Microsoft ACPI-Compliant System
IRQ 352	Microsoft ACPI-Compliant System
IRQ 353	Microsoft ACPI-Compliant System
IRQ 354	Microsoft ACPI-Compliant System
IRQ 355	Microsoft ACPI-Compliant System
IRQ 356	Microsoft ACPI-Compliant System
IRQ 357	Microsoft ACPI-Compliant System
IRQ 358	Microsoft ACPI-Compliant System
IRQ 359	Microsoft ACPI-Compliant System
IRQ 360	Microsoft ACPI-Compliant System
IRQ 361	Microsoft ACPI-Compliant System
IRQ 362	Microsoft ACPI-Compliant System
IRQ 363	Microsoft ACPI-Compliant System
IRQ 364	Microsoft ACPI-Compliant System
IRQ 365	Microsoft ACPI-Compliant System
IRQ 366	Microsoft ACPI-Compliant System
IRQ 367	Microsoft ACPI-Compliant System
IRQ 368	Microsoft ACPI-Compliant System
IRQ 369	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 370	Microsoft ACPI-Compliant System
IRQ 371	Microsoft ACPI-Compliant System
IRQ 372	Microsoft ACPI-Compliant System
IRQ 373	Microsoft ACPI-Compliant System
IRQ 374	Microsoft ACPI-Compliant System
IRQ 375	Microsoft ACPI-Compliant System
IRQ 376	Microsoft ACPI-Compliant System
IRQ 377	Microsoft ACPI-Compliant System
IRQ 378	Microsoft ACPI-Compliant System
IRQ 379	Microsoft ACPI-Compliant System
IRQ 380	Microsoft ACPI-Compliant System
IRQ 381	Microsoft ACPI-Compliant System
IRQ 382	Microsoft ACPI-Compliant System
IRQ 383	Microsoft ACPI-Compliant System
IRQ 384	Microsoft ACPI-Compliant System
IRQ 385	Microsoft ACPI-Compliant System
IRQ 386	Microsoft ACPI-Compliant System
IRQ 387	Microsoft ACPI-Compliant System
IRQ 388	Microsoft ACPI-Compliant System
IRQ 389	Microsoft ACPI-Compliant System
IRQ 390	Microsoft ACPI-Compliant System
IRQ 391	Microsoft ACPI-Compliant System
IRQ 392	Microsoft ACPI-Compliant System
IRQ 393	Microsoft ACPI-Compliant System
IRQ 394	Microsoft ACPI-Compliant System
IRQ 395	Microsoft ACPI-Compliant System
IRQ 396	Microsoft ACPI-Compliant System
IRQ 397	Microsoft ACPI-Compliant System
IRQ 398	Microsoft ACPI-Compliant System
IRQ 399	Microsoft ACPI-Compliant System
IRQ 400	Microsoft ACPI-Compliant System
IRQ 401	Microsoft ACPI-Compliant System
IRQ 402	Microsoft ACPI-Compliant System
IRQ 403	Microsoft ACPI-Compliant System
IRQ 404	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 405	Microsoft ACPI-Compliant System
IRQ 406	Microsoft ACPI-Compliant System
IRQ 407	Microsoft ACPI-Compliant System
IRQ 408	Microsoft ACPI-Compliant System
IRQ 409	Microsoft ACPI-Compliant System
IRQ 410	Microsoft ACPI-Compliant System
IRQ 411	Microsoft ACPI-Compliant System
IRQ 412	Microsoft ACPI-Compliant System
IRQ 413	Microsoft ACPI-Compliant System
IRQ 414	Microsoft ACPI-Compliant System
IRQ 415	Microsoft ACPI-Compliant System
IRQ 416	Microsoft ACPI-Compliant System
IRQ 417	Microsoft ACPI-Compliant System
IRQ 418	Microsoft ACPI-Compliant System
IRQ 419	Microsoft ACPI-Compliant System
IRQ 420	Microsoft ACPI-Compliant System
IRQ 421	Microsoft ACPI-Compliant System
IRQ 422	Microsoft ACPI-Compliant System
IRQ 423	Microsoft ACPI-Compliant System
IRQ 424	Microsoft ACPI-Compliant System
IRQ 425	Microsoft ACPI-Compliant System
IRQ 426	Microsoft ACPI-Compliant System
IRQ 427	Microsoft ACPI-Compliant System
IRQ 428	Microsoft ACPI-Compliant System
IRQ 429	Microsoft ACPI-Compliant System
IRQ 430	Microsoft ACPI-Compliant System
IRQ 431	Microsoft ACPI-Compliant System
IRQ 432	Microsoft ACPI-Compliant System
IRQ 433	Microsoft ACPI-Compliant System
IRQ 434	Microsoft ACPI-Compliant System
IRQ 435	Microsoft ACPI-Compliant System
IRQ 436	Microsoft ACPI-Compliant System
IRQ 437	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 438	Microsoft ACPI-Compliant System
IRQ 439	Microsoft ACPI-Compliant System
IRQ 440	Microsoft ACPI-Compliant System
IRQ 441	Microsoft ACPI-Compliant System
IRQ 442	Microsoft ACPI-Compliant System
IRQ 443	Microsoft ACPI-Compliant System
IRQ 444	Microsoft ACPI-Compliant System
IRQ 445	Microsoft ACPI-Compliant System
IRQ 446	Microsoft ACPI-Compliant System
IRQ 447	Microsoft ACPI-Compliant System
IRQ 448	Microsoft ACPI-Compliant System
IRQ 449	Microsoft ACPI-Compliant System
IRQ 450	Microsoft ACPI-Compliant System
IRQ 451	Microsoft ACPI-Compliant System
IRQ 452	Microsoft ACPI-Compliant System
IRQ 453	Microsoft ACPI-Compliant System
IRQ 454	Microsoft ACPI-Compliant System
IRQ 455	Microsoft ACPI-Compliant System
IRQ 456	Microsoft ACPI-Compliant System
IRQ 457	Microsoft ACPI-Compliant System
IRQ 458	Microsoft ACPI-Compliant System
IRQ 459	Microsoft ACPI-Compliant System
IRQ 460	Microsoft ACPI-Compliant System
IRQ 461	Microsoft ACPI-Compliant System
IRQ 462	Microsoft ACPI-Compliant System
IRQ 463	Microsoft ACPI-Compliant System
IRQ 464	Microsoft ACPI-Compliant System
IRQ 465	Microsoft ACPI-Compliant System
IRQ 466	Microsoft ACPI-Compliant System
IRQ 467	Microsoft ACPI-Compliant System
IRQ 468	Microsoft ACPI-Compliant System
IRQ 469	Microsoft ACPI-Compliant System
IRQ 470	Microsoft ACPI-Compliant System
IRQ 471	Microsoft ACPI-Compliant System
IRQ 472	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 473	Microsoft ACPI-Compliant System
IRQ 474	Microsoft ACPI-Compliant System
IRQ 475	Microsoft ACPI-Compliant System
IRQ 476	Microsoft ACPI-Compliant System
IRQ 477	Microsoft ACPI-Compliant System
IRQ 478	Microsoft ACPI-Compliant System
IRQ 479	Microsoft ACPI-Compliant System
IRQ 480	Microsoft ACPI-Compliant System
IRQ 481	Microsoft ACPI-Compliant System
IRQ 482	Microsoft ACPI-Compliant System
IRQ 483	Microsoft ACPI-Compliant System
IRQ 484	Microsoft ACPI-Compliant System
IRQ 485	Microsoft ACPI-Compliant System
IRQ 486	Microsoft ACPI-Compliant System
IRQ 487	Microsoft ACPI-Compliant System
IRQ 488	Microsoft ACPI-Compliant System
IRQ 489	Microsoft ACPI-Compliant System
IRQ 490	Microsoft ACPI-Compliant System
IRQ 491	Microsoft ACPI-Compliant System
IRQ 492	Microsoft ACPI-Compliant System
IRQ 493	Microsoft ACPI-Compliant System
IRQ 494	Microsoft ACPI-Compliant System
IRQ 495	Microsoft ACPI-Compliant System
IRQ 496	Microsoft ACPI-Compliant System
IRQ 497	Microsoft ACPI-Compliant System
IRQ 498	Microsoft ACPI-Compliant System
IRQ 499	Microsoft ACPI-Compliant System
IRQ 500	Microsoft ACPI-Compliant System
IRQ 501	Microsoft ACPI-Compliant System
IRQ 502	Microsoft ACPI-Compliant System
IRQ 503	Microsoft ACPI-Compliant System
IRQ 504	Microsoft ACPI-Compliant System
IRQ 505	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 506	Microsoft ACPI-Compliant System
IRQ 507	Microsoft ACPI-Compliant System
IRQ 508	Microsoft ACPI-Compliant System
IRQ 509	Microsoft ACPI-Compliant System
IRQ 510	Microsoft ACPI-Compliant System
IRQ 511	Microsoft ACPI-Compliant System
IRQ 4294967285	Intel(R) Management Engine Interface #1
IRQ 4294967286	Intel(R) Ethernet Controller (3) I225-IT
IRQ 4294967287	Intel(R) Ethernet Controller (3) I225-IT
IRQ 4294967288	Intel(R) Ethernet Controller (3) I225-IT
IRQ 4294967289	Intel(R) Ethernet Controller (3) I225-IT #2
IRQ 4294967290	Intel(R) Ethernet Controller (3) I225-IT #2
IRQ 4294967291	Intel(R) Ethernet Controller (3) I225-IT #2
IRQ 4294967292	Intel(R) UHD Graphics
IRQ 4294967293	Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft)
IRQ 4294967294	Standard SATA AHCI Controller

Note: These resource information were gathered using Windows 10 (the IRQ could be assigned differently depending on OS).

I/O MAP

I/O	ASSIGNMENT
0x00000000-0x00000CF7	PCI Express Root Complex
0x00000020-0x00000021	Programmable interrupt controller
0x00000024-0x00000025	Programmable interrupt controller
0x00000028-0x00000029	Programmable interrupt controller
0x0000002C-0x0000002D	Programmable interrupt controller
0x0000002E-0x0000002F	Motherboard resources
0x00000030-0x00000031	Programmable interrupt controller
0x00000034-0x00000035	Programmable interrupt controller
0x00000038-0x00000039	Programmable interrupt controller
0x0000003C-0x0000003D	Programmable interrupt controller
0x00000040-0x00000043	System timer
0x0000004E-0x0000004F	Motherboard resources
0x00000050-0x00000053	System timer

I/O	ASSIGNMENT
0x00000061-0x00000061	Motherboard resources
0x00000063-0x00000063	Motherboard resources
0x00000065-0x00000065	Motherboard resources
0x00000067-0x00000067	Motherboard resources
0x00000070-0x00000070	Motherboard resources
0x00000070-0x00000070	System CMOS/real time clock
0x00000080-0x00000080	Motherboard resources
0x00000092-0x00000092	Motherboard resources
0x000000A0-0x000000A1	Programmable interrupt controller
0x000000A4-0x000000A5	Programmable interrupt controller
0x000000A8-0x000000A9	Programmable interrupt controller
0x000000AC-0x000000AD	Programmable interrupt controller
0x000000B0-0x000000B1	Programmable interrupt controller
0x000000B2-0x000000B3	Motherboard resources
0x000000B4-0x000000B5	Programmable interrupt controller
0x000000B8-0x000000B9	Programmable interrupt controller
0x000000BC-0x000000BD	Programmable interrupt controller
0x000002F8-0x000002FF	Communications Port (COM2)
0x000003F8-0x000003FF	Communications Port (COM1)
0x000004D0-0x000004D1	Programmable interrupt controller
0x00000680-0x0000069F	Motherboard resources
0x00000A00-0x00000A0F	Motherboard resources
0x00000A10-0x00000A1F	Motherboard resources
0x00000A20-0x00000A2F	Motherboard resources
0x00000D00-0x0000FFFF	PCI Express Root Complex
0x0000164E-0x0000164F	Motherboard resources
0x00001800-0x000018FE	Motherboard resources
0x00001854-0x00001857	Motherboard resources
0x00002000-0x000020FE	Motherboard resources
0x00003000-0x00003FFF	Intel(R) PCI Express Root Port #0 - 4B38
0x00004000-0x0000403F	Intel(R) UHD Graphics
0x00004060-0x0000407F	Standard SATA AHCI Controller
0x00004080-0x00004083	Standard SATA AHCI Controller

I/O	ASSIGNMENT
0x00004090-0x00004097	Standard SATA AHCI Controller
0x0000EFA0-0x0000EFBF	Intel(R) SMBus Controller - 4B23

Memory Map

MEMORY MAP	ASSIGNMENT
0xFEC80000-0xFECFFFFFFF	Motherboard resources
0xFEDA0000-0xFEDA0FFF	Motherboard resources
0xFEDA1000-0xFEDA1FFF	Motherboard resources
0xC0000000-0xCFFFFFFF	Motherboard resources
0xFED20000-0xFED7FFFF	Motherboard resources
0xFED90000-0xFED93FFF	Motherboard resources
0xFED45000-0xFED8FFFF	Motherboard resources
0xFEE00000-0xFEEFFFFFFF	Motherboard resources
0x80900000-0x809FFFFFFF	Intel(R) Ethernet Controller (3) I225-IT
0x808FC000-0x808FFFFFFF	Intel(R) Ethernet Controller (3) I225-IT
0xFFEFC000-0xFFEFFFFFFF	High Definition Audio Controller
0xFFF00000-0xFFFFFFFF	High Definition Audio Controller
0xFED00000-0xFED003FF	High precision event timer
0x0000-0x9FFFFFFF	Intel(R) PCI Express Root Port #0 - 4B38
0xFE010000-0xFE010FFF	Intel(R) SPI (flash) Controller - 4B24
0xFD000000-0xFD68FFFF	Motherboard resources
0xFD6F0000-0xFDFFFFFFF	Motherboard resources
0xFE000000-0xFE01FFFF	Motherboard resources
0xFE200000-0xFE7FFFFF	Motherboard resources
0xFF000000-0xFFFFFFFF	Motherboard resources
0xFD6B0000-0xFD6CFFFF	Motherboard resources
0xFD6B0000-0xFD6CFFFF	Motherboard resources
0x80A00000-0x80A01FFF	Standard SATA AHCI Controller
0x80A03000-0x80A030FF	Standard SATA AHCI Controller
0x80A02000-0x80A027FF	Standard SATA AHCI Controller
0x21000000-0x210FFFFF	Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft)
0x80700000-0x807FFFFFFF	Intel(R) Ethernet Controller (3) I225-IT #2
0x806FC000-0x806FFFFFFF	Intel(R) Ethernet Controller (3) I225-IT #2
0x21180000-0x21180FFF	Intel(R) SMBus Controller - 4B23

MEMORY MAP	ASSIGNMENT
0xFFEFB000-0xFFEFBFFF	Intel(R) Management Engine Interface #1
0x80800000-0x809FFFFFF	Intel(R) PCI Express Root Port #1 - 4B39
0x80600000-0x807FFFFFF	Intel(R) PCI Express Root Port #2 - 4B3A
0x1000000-0x1FFFFFF	Intel(R) UHD Graphics
0x0000-0xFFFFFFFF	Intel(R) UHD Graphics
0xFD6E0000-0xFD6EFFFF	Motherboard resources
0xFD6D0000-0xFD6DFFFF	Motherboard resources
0xFD6A0000-0xFD6AFFFF	Motherboard resources
0xFD690000-0xFD69FFFF	Motherboard resources
0xA0000-0xBFFFF	PCI Express Root Complex
0xE0000-0xE3FFF	PCI Express Root Complex
0xE4000-0xE7FFF	PCI Express Root Complex
0xE8000-0xEBFFF	PCI Express Root Complex
0xEC000-0xEFFFF	PCI Express Root Complex
0xF0000-0xFFFFF	PCI Express Root Complex
0x7FC00000-0x805FFFFFF	Intel(R) PCI Express Root Port #0 - 4B38
0x7FC00000-0x805FFFFFF	PCI Express Root Complex

Configuring WatchDog Timer

The I/O port address of the watchdog timer is 2E (hex) and 2F (hex). 2E (hex) is the address port. 2F (hex) is the data port. Users must first assign the address of register by writing address value into address port 2E (hex), then write/read data to/from the assigned register through data port 2F (hex).

Configuration Sequence

To program F81967 configuration registers, the following configuration sequence must be followed:

(1) Enter the extended function mode

To place the chip into the Extended Function Mode, two successive writes of 0x87 must be applied to Extended Function Enable Registers (EFERs, i.e. 2Eh or 4Eh).

(2) Configure the configuration registers

The chip selects the Logical Device and activates the desired Logical Devices through Extended Function Index Register (EFIR) and Extended Function Data Register (EFDR). The EFIR is located at the same address as the EFER, and the EFDR is located at address (EFIR+1). First, write the Logical Device Number (i.e. 0x07) to the EFIR and then write the number of the desired Logical Device to the EFDR. If accessing the Chip (Global) Control Registers, this step is not required. Secondly, write the address of the desired configuration register within the Logical Device to the EFIR and then write (or read) the desired configuration register through the EFDR.

(3) Exit the extended function mode

To exit the Extended Function Mode, writing 0xAA to the EFER is required. Once the chip exits the Extended Function Mode, it is in the normal running mode and is ready to enter the configuration mode.

Code example for watch dog timer


Enable watchdog timer and set timeout interval to 30 seconds.

```
;----- Enter to extended function mode -----  
mov  dx, 2Eh  
mov  al, 87h  
out  dx, al  
out  dx, al  
;----- Select Logical Device 7 of watchdog timer -----  
mov  al, 07h  
out  dx, al  
inc  dx  
mov  al, 07h  
out  dx, al  
;----- Enable Watch dog feature -----  
dec  dx  
mov  al, 30h  
out  dx, al  
inc  dx  
mov  al, 01h  
out  dx, al  
;----- Set timeout interval as 30seconds and start counting -----  
dec  dx  
mov  al, F6h  
out  dx, al  
inc  dx  
mov  al, 1Eh  
out  dx, al  
;----- Enable Watch PME-----  
dec  dx  
mov  al, FAh  
out  dx, al  
inc  dx  
in   al, dx  
or   al, 51h  
out  dx, al  
;----- Set second as counting unit -----  
dec  dx  
mov  al, F5h  
out  dx, al  
inc  dx  
in   al, dx  
and  al, DEh  
out  dx, al  
;----- Start the watchdog timer -----  
or   al, 20h  
out  dx, al  
;----- Exit the extended function mode -----  
dec  dx  
mov  al, AAh  
out  dx, al
```

Flash BIOS Update

I. Prerequisites

- 1 Prepare a bootable media (e.g. USB storage device) which can boot system to EFI Shell.
Note: Copy UEFI Shell into the storage device under specific directory path. (/efi/boot/bootx64.efi)
- 2 Download and save the BIOS file (e.g. U8301PX1.bin) to the bootable device.
- 3 Copy AMI flash utility – AfuEfix64.efi (v5.14.01.0015) into bootable device.
- 4 Make sure the target system can first boot to the bootable device.
 - (1) Connect the bootable USB device.
 - (2) Turn on the computer and press <ESC> or during boot to enter BIOS Setup.
 - (3) Select [**Boot**] menu and set the USB bootable device as the 1st boot device.
 - (4) Press <F4> to save the configuration and exit the BIOS setup menu.

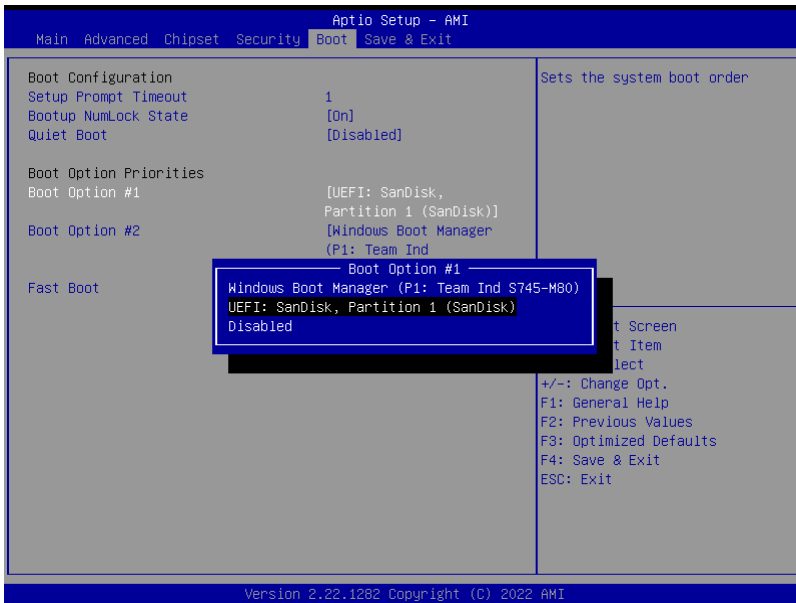

II. AFUEFI Command For System BIOS Update

AfuEfix64.efi is the AMI firmware update utility. The command line is shown as below:

AfuEfix64 <ROM File Name> [option1] [option2]....

Users can type “**AfuEfix64/?**” to view the definition of each control option. The recommended options for BIOS ROM update include the following parameters:

- /P**: Program main BIOS image.
- /B**: Program Boot Block.
- /N**: Program NVRAM.
- /X**: Don't check ROM ID.

III. BIOS Update Procedure

- 1** Use the bootable USB storage to boot up the system into the EFI Shell.
- 2** Type "**AfuEfix64 U830xxxx.bin /p /b /n /x /r1**" and press "Enter" to start the flash procedure. (xxxx means the BIOS revision part, e.g. 0PM1...)
- 3** During the update procedure, you will see the BIOS update process status and its percentage. Beware! **DO NOT** turn off the system power or reset your computer if the whole procedure is not completed yet, or it may crash the BIOS ROM and make the system unable to boot up next time.
- 4** After BIOS update procedure is completed, the messages below will display:

```
fs0:\> AfuEfix64 U8301PX1.bin /p /b /n /x /r1
+-----+
|          AMI Firmware Update Utility v5.14.01.0015          |
| Copyright (c) 1985-2020, American Megatrends International LLC. |
| All rights Reserved. Subject to AMI licensing agreement.      |
+-----+
Reading flash ..... Done
- ME Data Size Checking ..... Pass
- FFS checksums ..... Pass
- Check RomLayout ..... Pass
Erasing Main Block ..... Done
Updating Main Block ..... Done
Verifying Main Block ..... Done
Erasing Boot Block ..... Done
Updating Boot Block ..... Done
Verifying Boot Block ..... Done
Erasing NVRAM Block ..... Done
Updating NVRAM Block ..... Done
Verifying NVRAM Block ..... Done

Process completed.
fs0:\>
```

- 5 Restart the system and boot up with the new BIOS configurations.
- 6 The BIOS Update is completed after the system is restarted.
- 7 Reboot the system and verify if the BIOS version shown on the initialization screen has been updated.

